


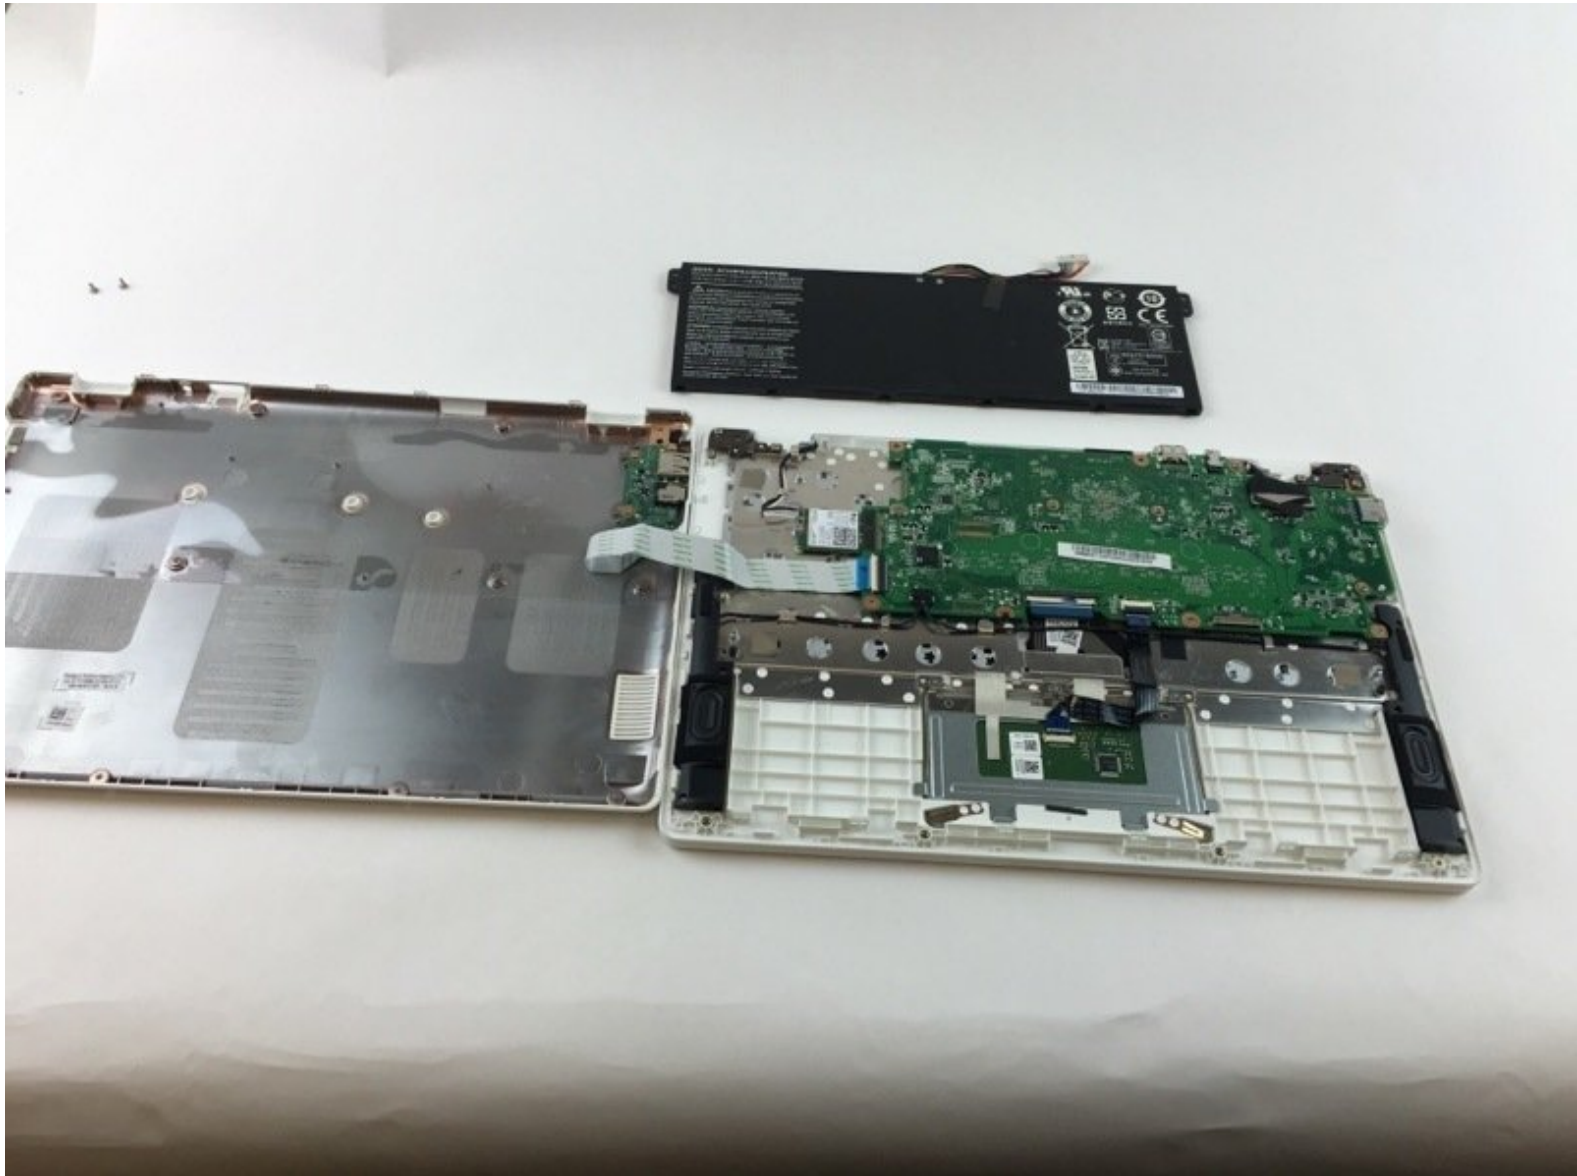

Acer Chromebook CB3-111-C670 Battery Replacement

Replace a faulty battery in the Acer Chromebook CB3-111-C670.

Written By: Tony



INTRODUCTION

This guide will show you how to replace a faulty battery in the Acer Chromebook CB3-111-C670.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Acer AC14B18J Replacement Laptop Battery](#) (1)
- [Acer Chromebook CB3-111-C670 Battery](#) (1)
- [Acer Chromebook CB3-111-C670 Lower Case](#) (1)

Step 1 — Battery




- ⚠ Be sure to have completely shut down the device before attempting to open it.
- Remove the twelve Phillips #00 screws.

Step 2




- Insert a prying tool in between the top and bottom pieces of the laptop case to pry them apart but *do not remove the lower case*.
- Carefully open the case to the left to avoid ripping the interior ribbon cable.

Step 3

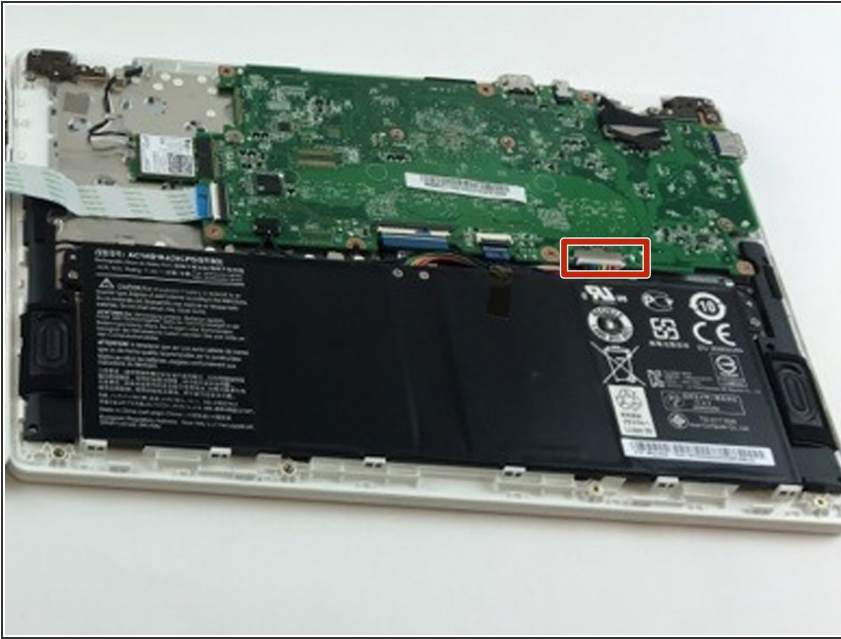

- Pull the battery connector cable towards the battery to disconnect it.

Step 4

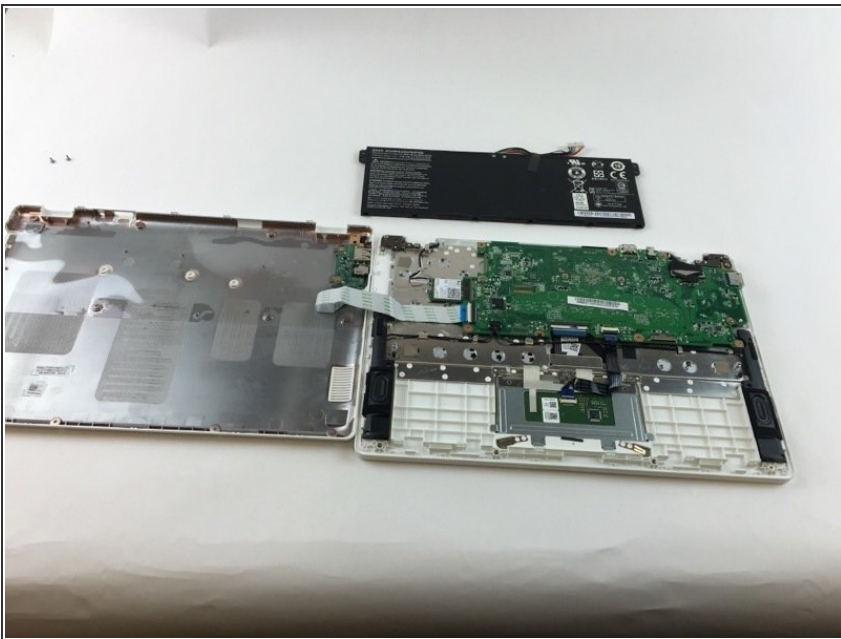

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.