


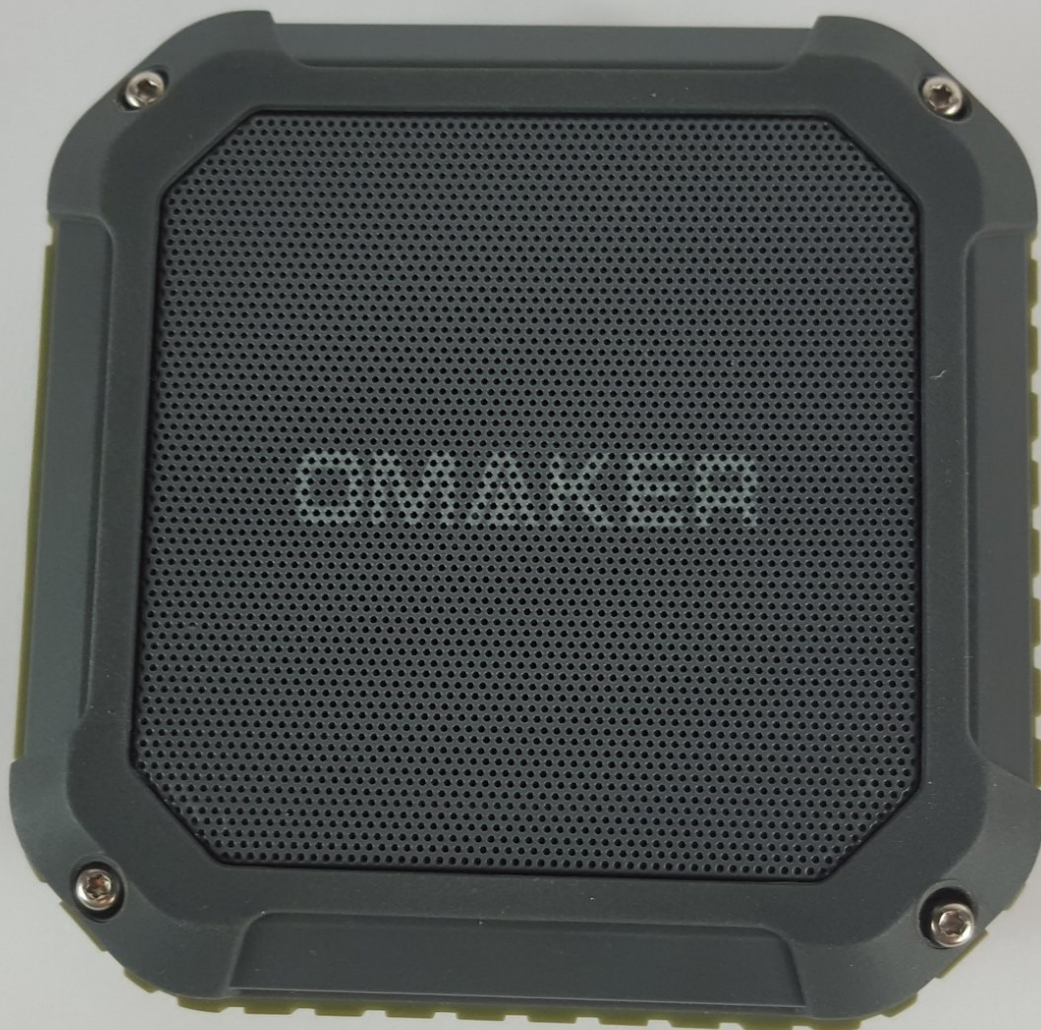

Omaker M4 Front Case Replacement

This guide will show how to remove the front case from the Omaker M4 speaker.

Written By: Andrew Entwistle




INTRODUCTION

The front case of the Omaker M4 provides a protective layer for the speaker cone. Once the front case is removed, the speaker can be accessed.

TOOLS:

- [Magnetic Pickup Tool](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Front Case

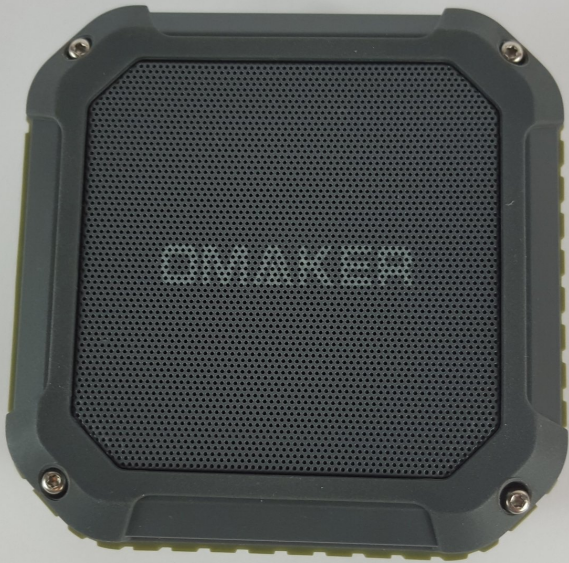

- Flip the device over so the front of the device is facing upwards. Make sure to place the speaker on a flat surface

Step 2



- Use a T6 Torx Screwdriver to remove the four screws from the front of the device.

Step 3



- Use a magnet to remove the screws after unscrewing them and place them aside.

Step 4



- Carefully remove the front case by gently pulling it from the body of the device.

To reassemble your device, follow these instructions in reverse order.

