




# Omaker M4 Battery Replacement

This guide will show how to remove the battery from the Omaker M4 speaker.

Written By: Carlos Pernia

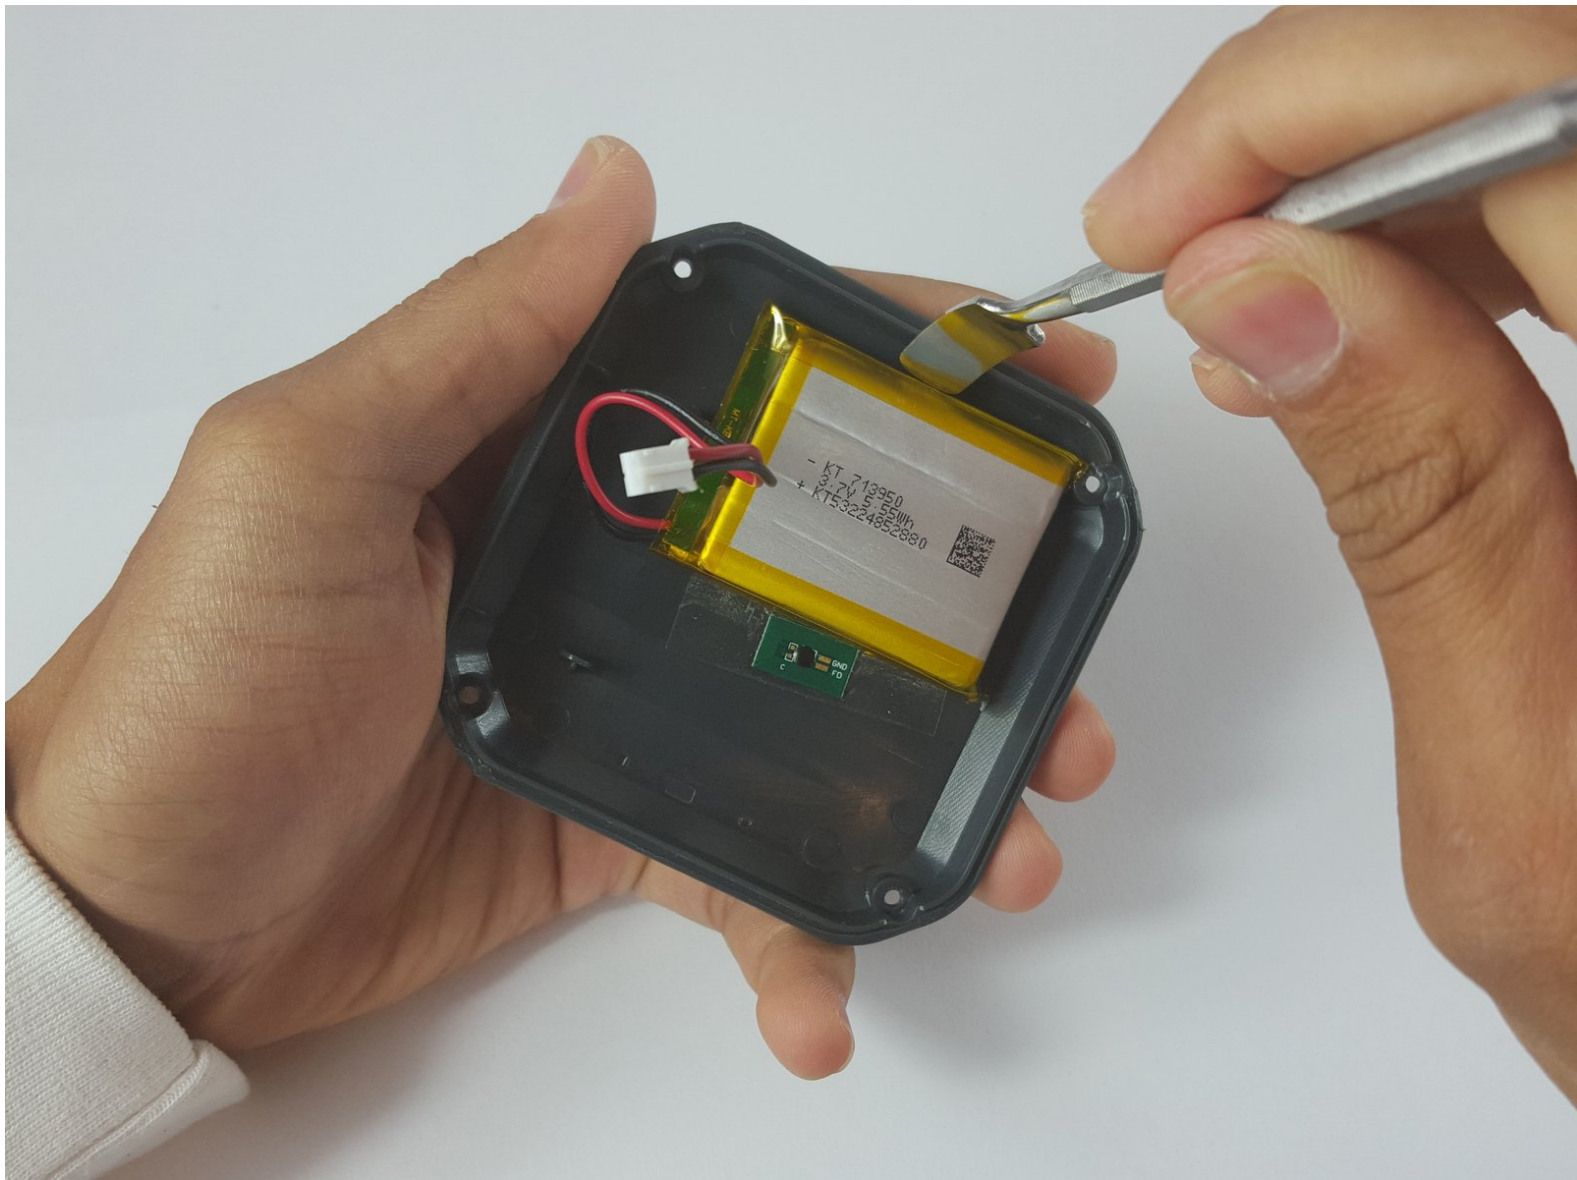

---

## INTRODUCTION

When using the metal spudger to remove the battery, be sure to carefully pry along the entire side the battery so that the battery will come off without bending.

---

### TOOLS:

- [Magnetic Pickup Tool](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [Metal Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Back Case



- Flip the device over so the front of the speaker is facing down. Make sure to place the speaker on a flat surface

## Step 2



- Use a T6 Torx screwdriver to remove the four 9mm screws from the back of the device.

### Step 3




- Use a magnet to remove the screws after unscrewing them and place them aside.

### Step 4



- Carefully remove the back cover without breaking the battery wire.


## Step 5

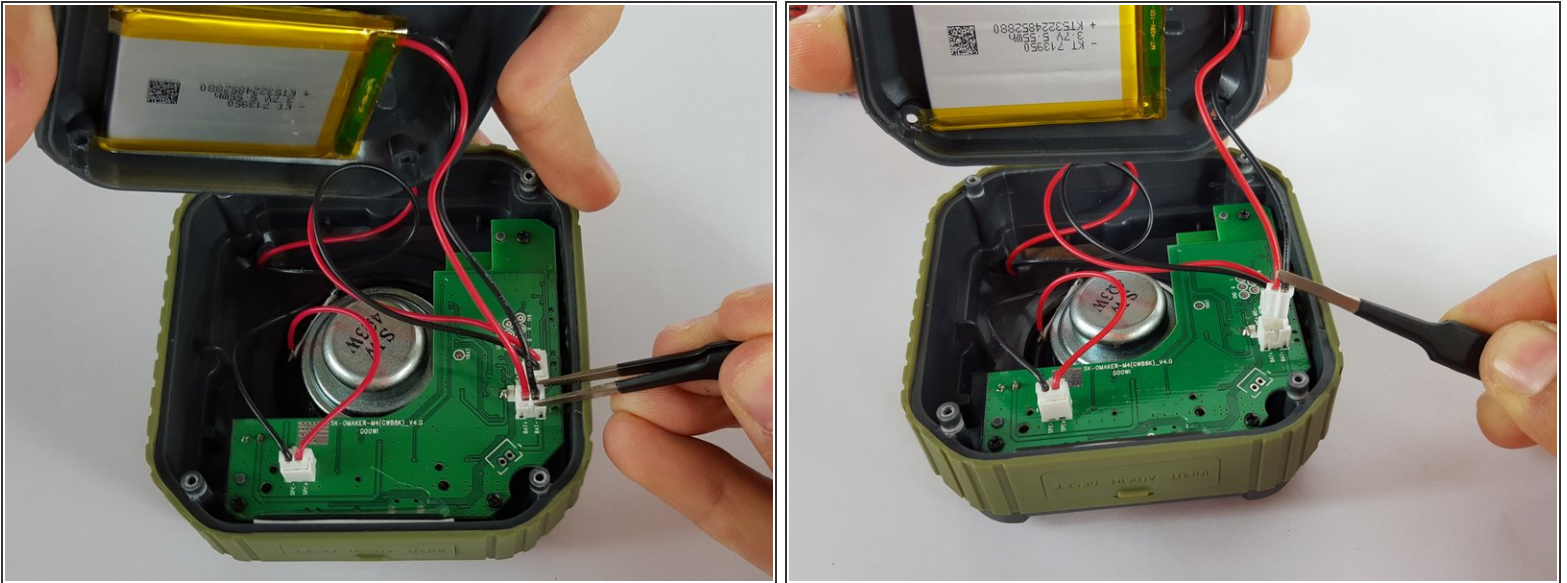

- Remove the end of the battery connection from the motherboard by holding the end of the wire and carefully pulling it out of the socket using tweezers.

**i** The battery is still attached to the back cover.

## Step 6 — Battery

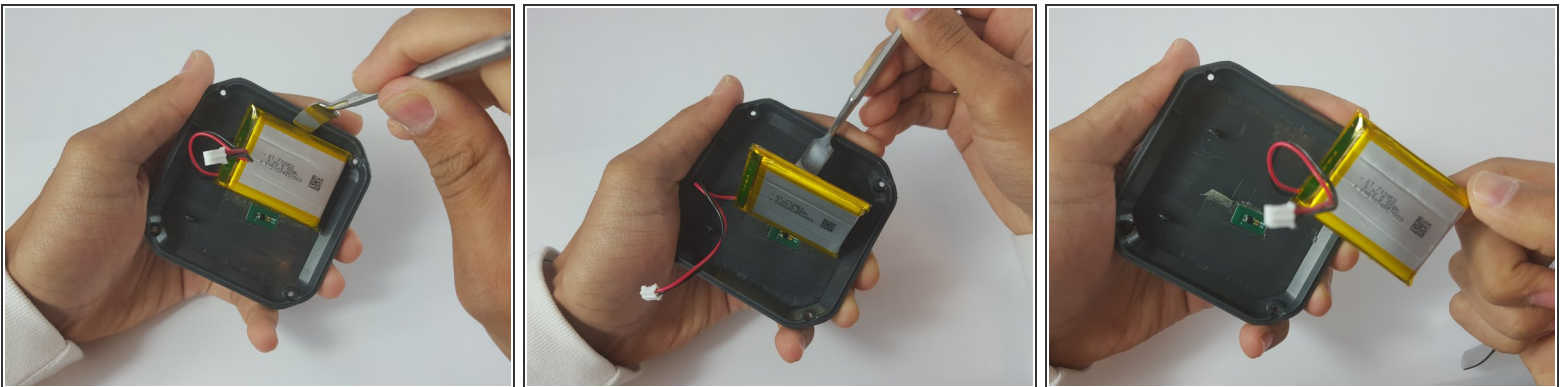

- Use the metal spudger to carefully pry along the entire side of the battery from its connecting tape on the back cover.

To reassemble your device, follow these instructions in reverse order.