



# Nintendo 3DS SD Board Replacement

SD board prerequisite.

Written By: David Hodson



---

## INTRODUCTION

SD board prerequisite guide.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — SD Board



- Remove the two 4.5 mm Phillips screws securing the SD board to the motherboard.

## Step 2



- Use the flat end of a spudger to pry the SD board ribbon cable connector off its socket on the motherboard.



### Step 3



- Insert the flat end of a spudger between the SD board and the motherboard.
- Run the spudger along the sides of the SD board to free it from the adhesive pad holding it in place.
- Once completely freed, lift the SD board straight off the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 11:42:42 AM.