



ASUS ZenWatch Watch Strap Removal

Removing the ASUS ZenWatch strap.

Written By: Wayne McClure



INTRODUCTION

The ASUS ZenWatch comes with a leather strap that will wear down and need replacing. Any 22mm watch strap can be easily installed using these steps.

If replacing with a generic strap make sure it comes with 22mm spring bars!

Step 1 — Watch Strap Removal



- On the strap there is a knob. Sliding this knob towards the opposite side of the strap releases the tension on the spring bar, allowing you to pull the strap out..

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 08:46:39 PM.