



Omaker M4 Wrist Strap Replacement

This guide will show how to attach a wrist strap to the Omaker M4 Speaker.

Written By: Andrew Entwistle



INTRODUCTION

For this quick and simple guide, we will be removing and reinstalling the wrist strap on a Omaker M4 portable speaker. This guide will be helpful for those who are looking to fix a broken wrist strap, or swap out the original for a different styled strap.

Step 1 — Wrist Strap



- Locate the designated attachment spot on the device. **Feed** the thin string loop under the plastic bridge through to the other side.

Step 2



- Pull the end of the loop through the device as far as possible.

Step 3



- Feed the end of the strap through the loop. Pull the strap tight until it is secure.

To reassemble your device, follow these instructions in reverse order.