



HP EliteBook 2530p RAM (lower slot) Replacement

How to access the bottom RAM module in the HP EliteBook 2530p

Written By: Gigabit87898

INTRODUCTION

Need to upgrade the RAM in your EliteBook 2530p? This guide will show you how to access the bottom RAM slot on the laptop.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)

PARTS:

 
 
- [1GB PC2-6400 SODIMM](#) (1)
- [Memory 2GB \(for upgrade\): PC2-6400 DDR2, Speed 800MHz \(backward compatible to 667MHz and 533MHz\); 200-pin SoDIMM](#) (1)
- [4GB PC2 6400 SODIMM](#) (1)

Step 1 — Remove the battery




- Remove the battery from the laptop.

Step 2 — Removing the back cover.

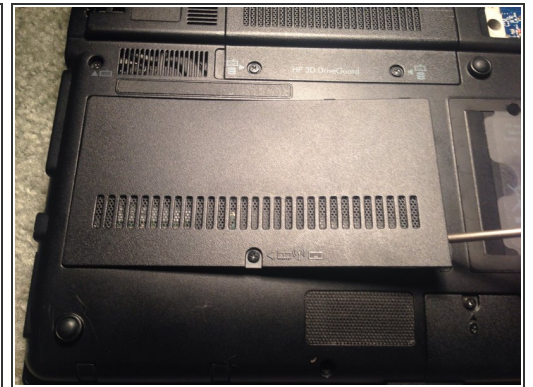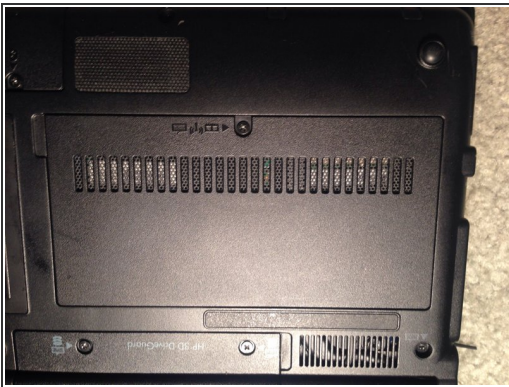

- Remove the RAM/Wireless card cover to access the RAM.

 Step 3 — Removing the RAM

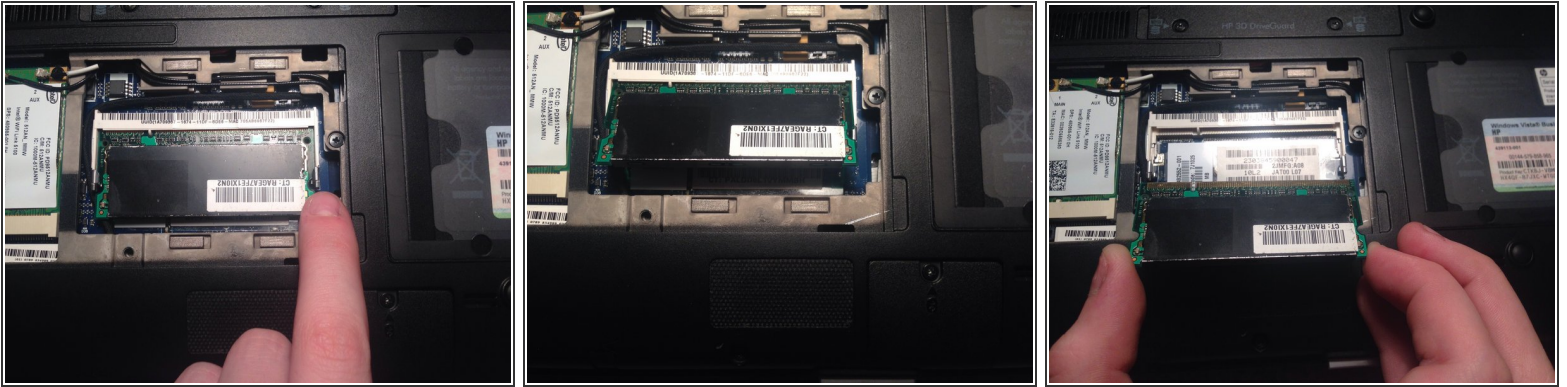

- Remove the RAM. Push on the two tabs holding the module in the laptop and lift the module by the edges.

To reassemble your device, follow these instructions in reverse order.