




# HP Elitebook 6930p CPU Replacement

This guide will teach you how to replace the CPU in a HP Elitebook 6930p.

Written By: Lowell

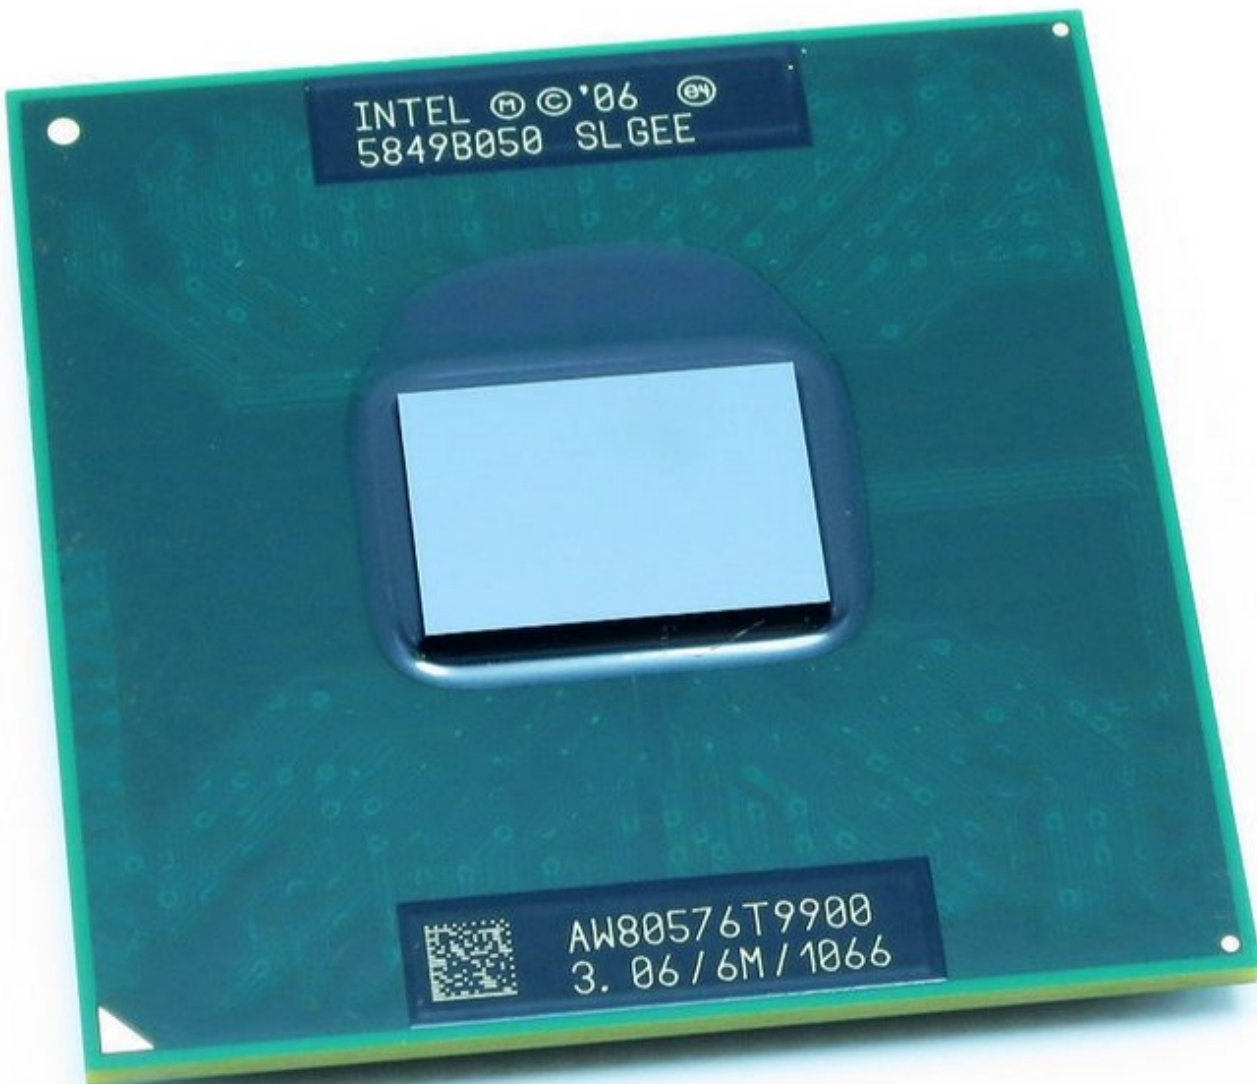

## INTRODUCTION

Before starting, remove the battery and keyboard.



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Flathead Screwdriver](#) (1)



### PARTS:


- [Socket 479 Core 2 Duo](#) (1)  
CPU

## Step 1 — Take off the Heat Sync

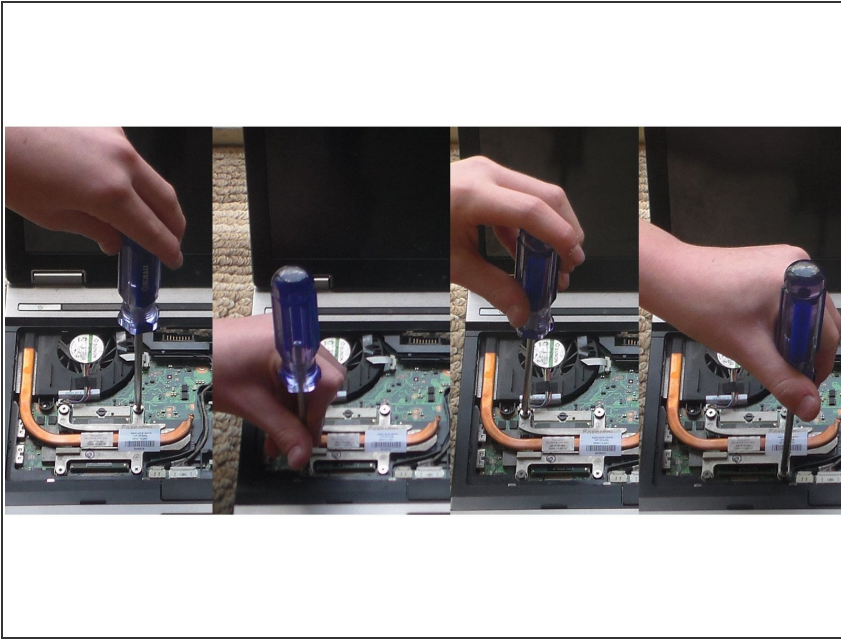


- ⓘ Unscrew the screws in order from left to right in the picture.

## Step 2 — Unlock the CPU Socket

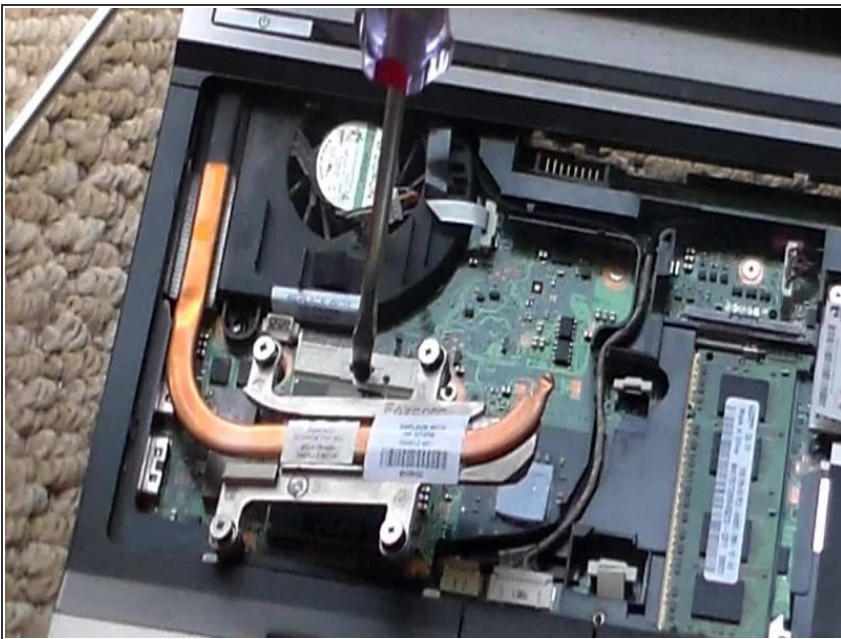

- Insert wisdom here.

### Step 3 — Unplug the fan

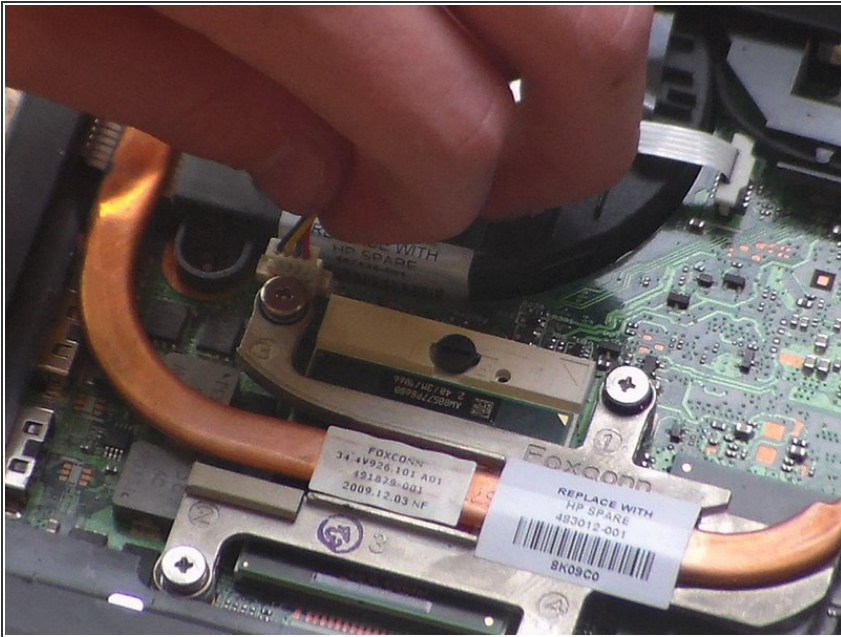

- Do this step if the cord of the fan is in the way of the CPU.


### Step 4 — Remove the CPU



- Insert wisdom here.

## Step 5 — Put the New CPU In



 Make sure the new CPU works or is better than the old one if you are upgrading the CPU.

To reassemble your device, follow steps 1-4 in reverse order.