



Bose SoundLink Color Outer Casing Replacement

Use this guide to remove or replace the outer casing of your Bose SoundLink Color.

Written By: Michael Thorn



INTRODUCTION

This guide will show how to remove the 4 screws that are holding the two parts of the casing together and how to separate the casing for replacement.

TOOLS:

- [Tamper Resistant TORX Plus TR Bit \(1\)](#)
 - [Phillips #0 Screwdriver \(1\)](#)
 - [Metal Spudger \(1\)](#)
-

Step 1 — Outer Casing



i Four round, plastic plugs are located on the back of the device.

- Using a metal spudger, carefully pry up the plastic covers.

! The covers are all glued on, so be careful not to scar the casing when prying them off. If possible, use a spudger or plastic opening tool to remove them.

Step 2



- Remove the four 1.8 cm-long T15 Torx Security screws from the outer case.

This document was generated on 2021-01-17 09:47:31 AM (MST).

Step 3



- Carefully open up the casing.
 - ☑ The top button pad may need to be re-glued upon installing the new casing.

To reassemble your device, follow these instructions in reverse order.