


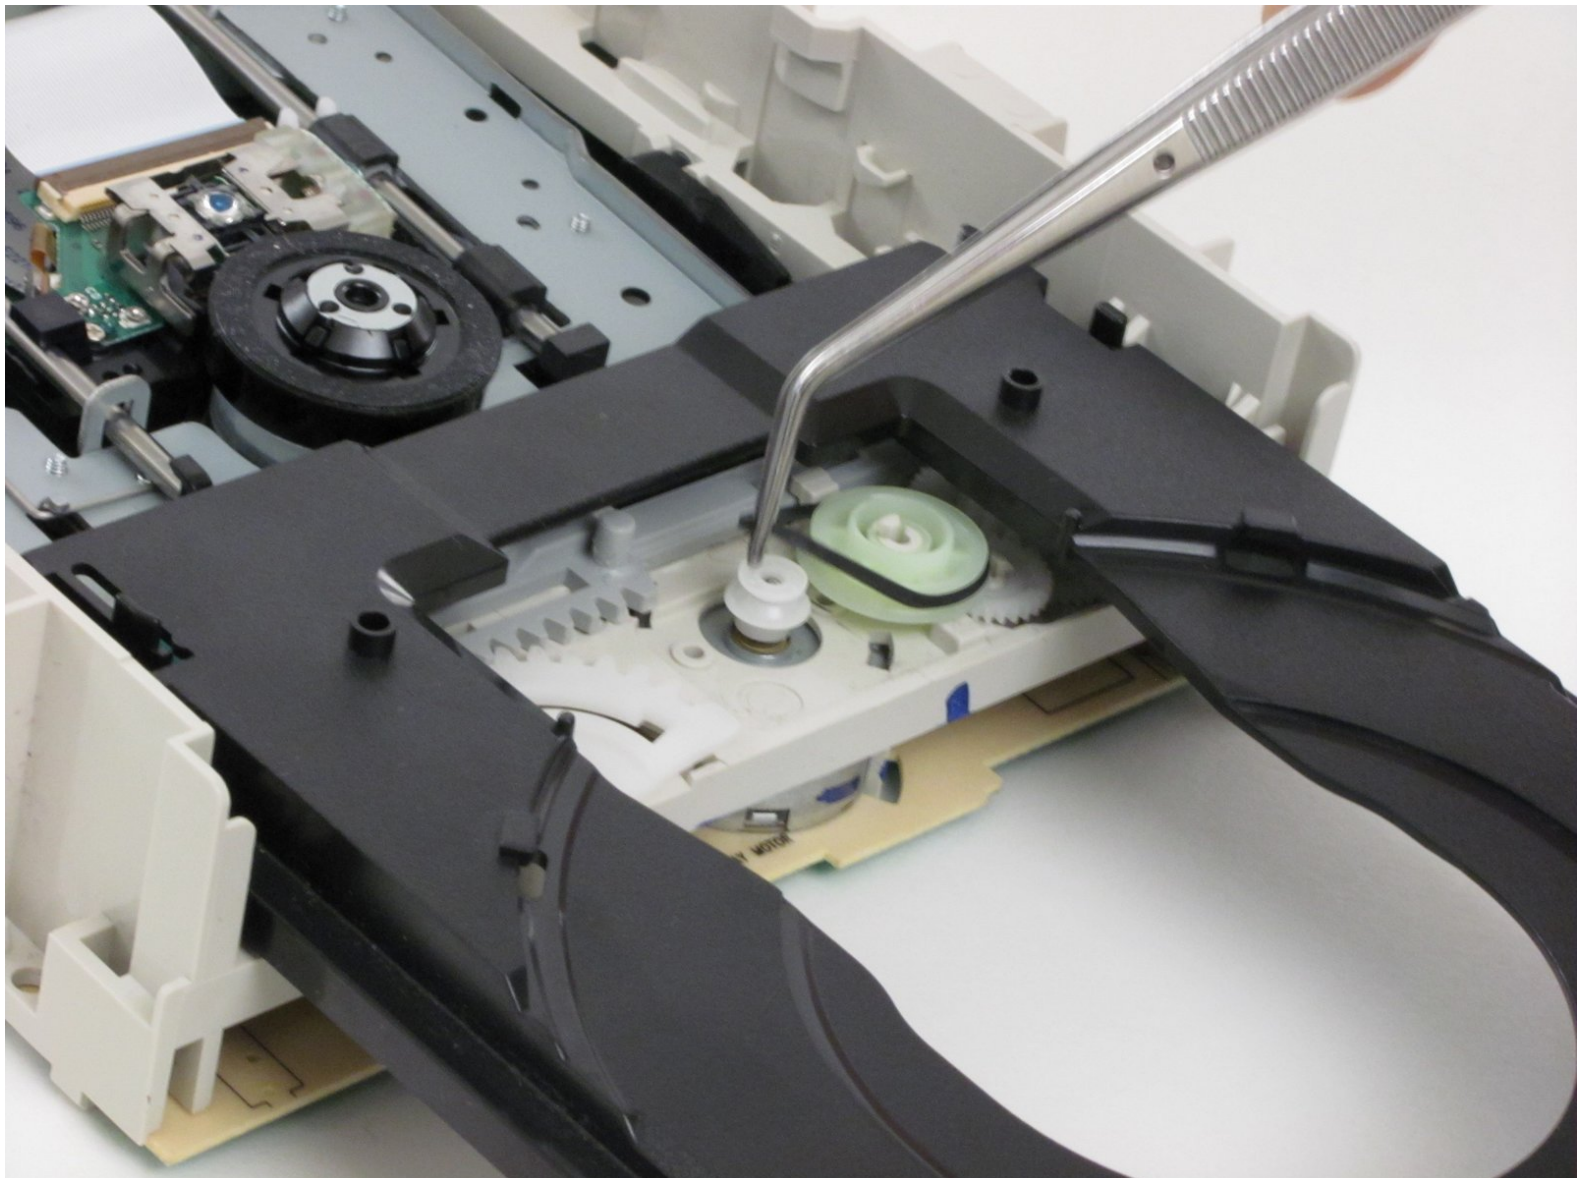

Lite-On LightScribe SHM-165H6S Drive Belt Replacement

Replace drive belt for disc tray.

Written By: James Biggs



INTRODUCTION

If your drive is having problems opening, the drive belt may have broken or fallen out of the track and you will need to replace it.

TOOLS:




- [Paper Clip](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Chassis



- Insert an open paper clip into the small hole on the left side of the faceplate.
- After the tray opens, extend it fully.

Step 2

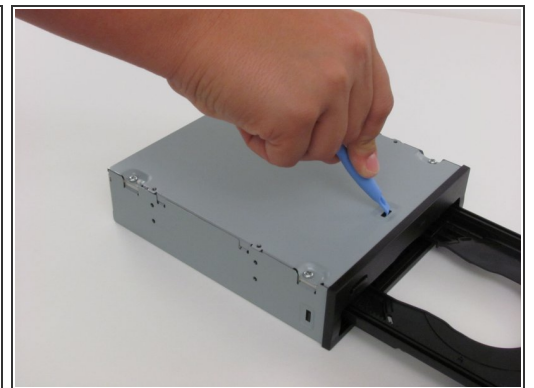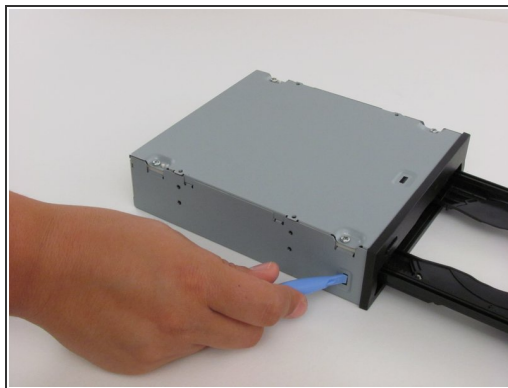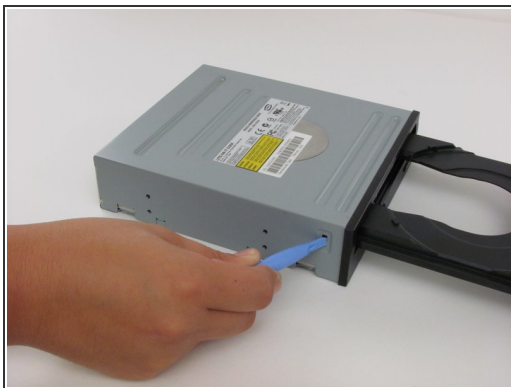


- Use an opening device to push in the black tabs on the left, right and bottom of the outer chassis to unhook the faceplate.

Step 3





- Pull the faceplate away from the main chassis.

Step 4

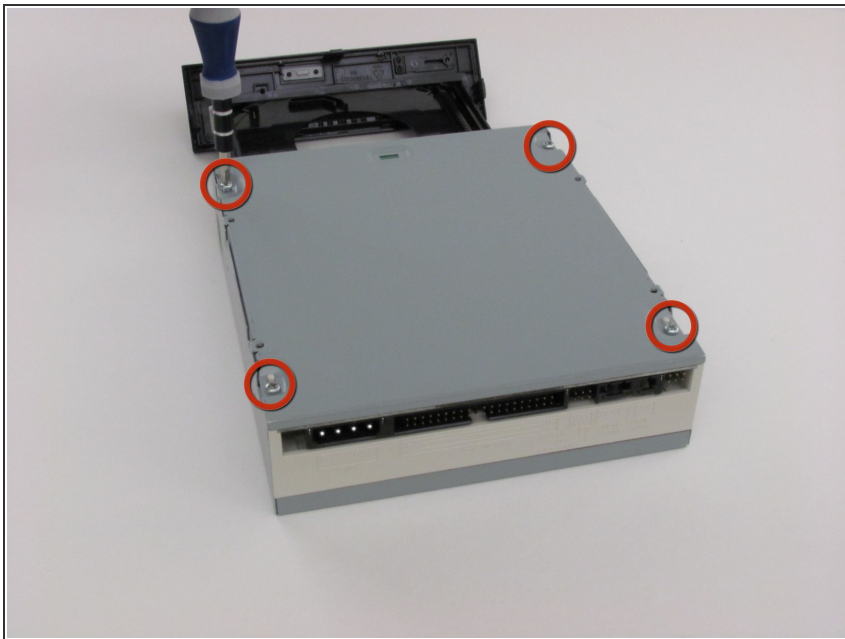



- Unscrew the four 8.5 mm screws on the bottom chassis using a Philips #2 screwdriver.

Step 5

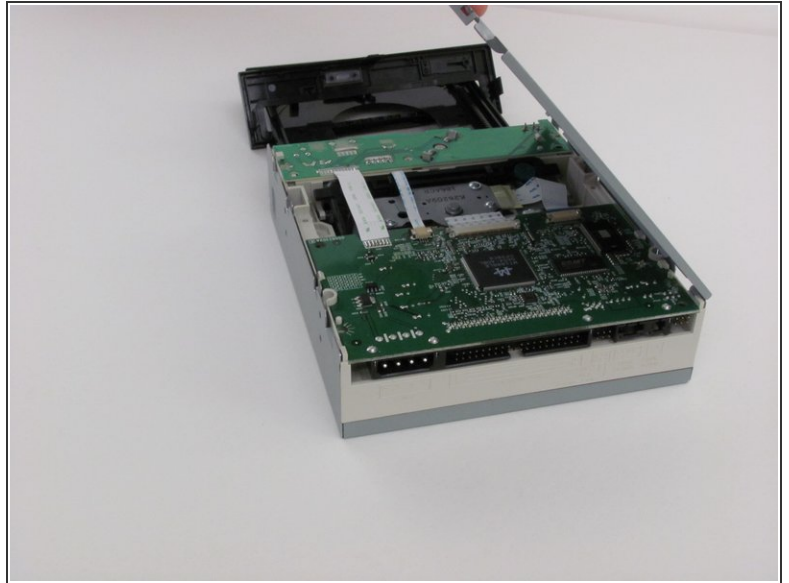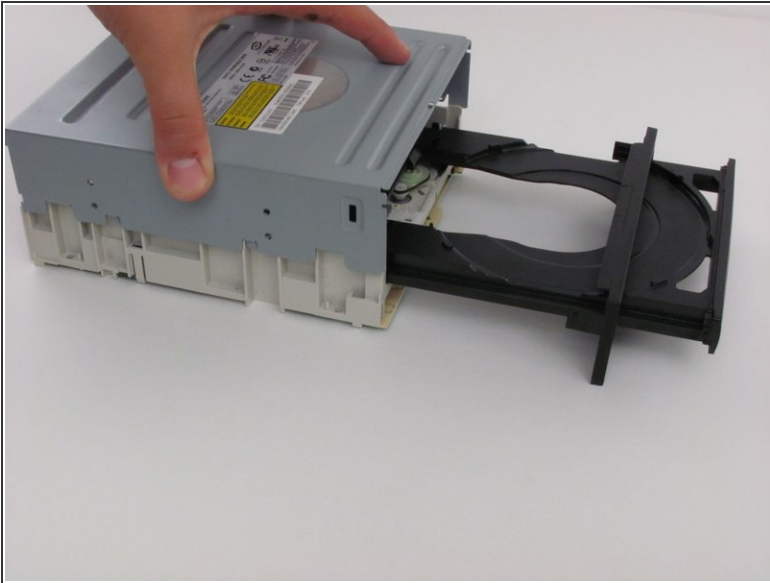


- Lift the top and bottom chassis straight up in order to remove them.

Step 6 — Drive Belt

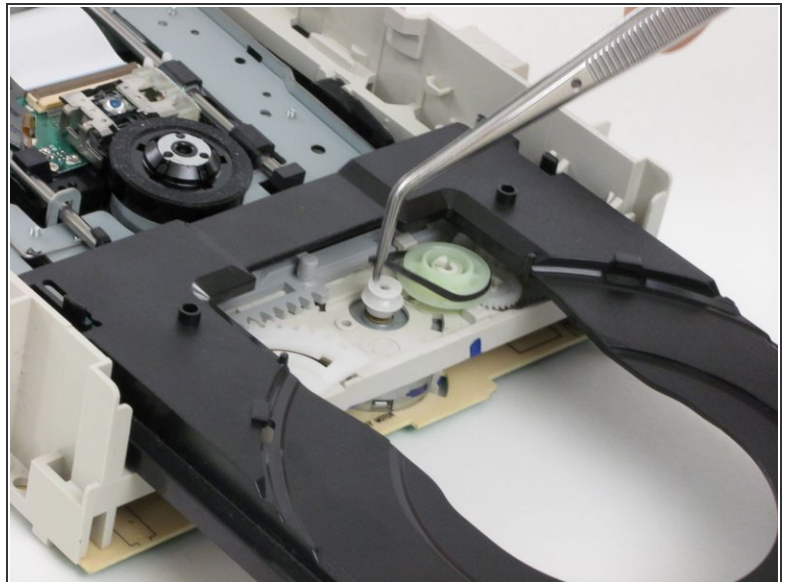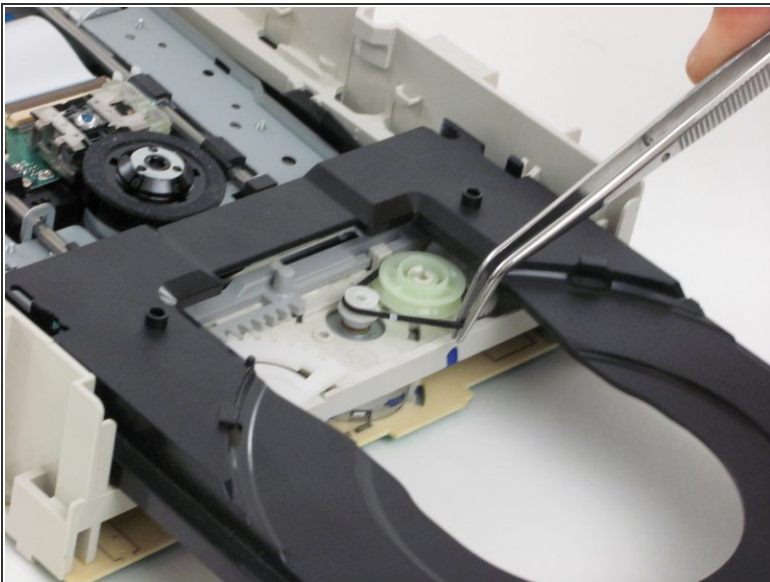

- Extend the tray so that the belt is accessible.
- Remove the old belt using tweezers.

Step 7

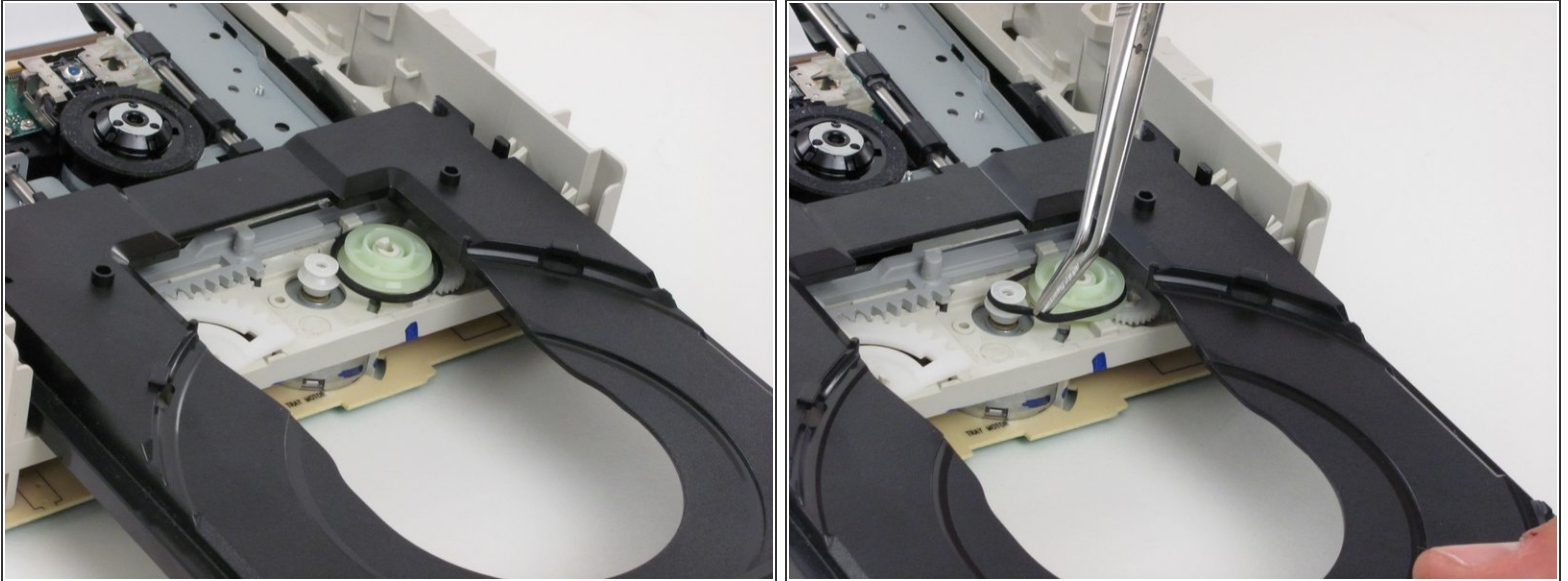

- Carefully replace with the new belt by wrapping it around the larger gear first, followed by the smaller gear.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-12 10:29:17 PM.