



# Sony Xplod CDX-MP30 Front Panel Replacement

Replace the front panel on your Sony Xplod.

Written By: Chao Chen



## INTRODUCTION

How to install the LCD screen for the Sony Xplod.

## Step 1 — Front Panel



- Press down the release button on the bottom left corner of the face plate.
- Then remove the face plate carefully.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 04:11:14 PM.