



Verizon Wireless CDM 7075 Battery Replacement

This guide will instruct you on how to replace the battery for the Verizon Wireless CDM 7075.

Written By: Corey Ryman



INTRODUCTION

This easy-to-follow guide will teach you how to replace the battery for the Verizon Wireless CDM 7075 in 2 simple steps. No tools or background knowledge is necessary for this guide.

Step 1 — Battery



- Remove the back panel by first pressing and holding the gray button on the back. While doing that also press and slide the panel down and off.

Step 2



- Carefully remove the battery from the phone by prying the battery from the top.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-03-11 08:04:20 AM (MST).

