



Nikon Coolpix 995 Memory Card Replacement

This guide will explain how to remove and replace the memory card

Written By: Cory Layman



INTRODUCTION

If you're having problems with your memory card, this guide will show you how to remove and replace your memory card in the Nikon Coolpix 995.


Step 1 — Memory Card



- Set camera so the memory card compartment is facing you.
- Place thumb under cover latch where it says "card", then gently lift straight upwards.

Step 2



 Now that the Memory card compartment is open, carefully remove the memory card.

Step 3



- ⓘ Be sure your memory card is facing the right direction, then gently insert it into the memory card slot.
- After you properly reinsert the memory card, place your thumb on the top of the cover and gently press down until you hear and feel the cover click back into the closed position.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 05:17:05 AM.