



# Kyocera OystR Screen Replacement

Common Kyocera Oyster problem, easy fix.

Written By: David



---

## INTRODUCTION

Providing information to disassemble the phone and replace the screen.

---

### TOOLS:

- [Tri-point Y0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Removing the battery



- Make sure the phone is turned off before disassembly.
- Lift the bottom of the phone's back cover upwards, revealing the phone's battery housing.
- Remove the battery from the casing. This is simply a precaution.
- Turn the phone over so that the front side is facing you. Flip open the device in preparation for the next step.

## Step 2 — Removing screws from screen



- Peel the Virgin Mobile sticker from the phone's screen, revealing two screws beneath it.
- Using the Tri-Wing Y0 screwdriver, remove the two screws from the screen.

### Step 3 — Exposing internal components




- Lift the plastic cover of the phone screen upwards by prying around the perimeter of the screen with a plastic opening tool.
- After lifting the plastic cover from the screen, remove the two screws from the metal cover holding the screen in place.

### Step 4 — Removing metal cover



- Remove metal cover by lifting up and away from the device.

## Step 5 — Screen removal

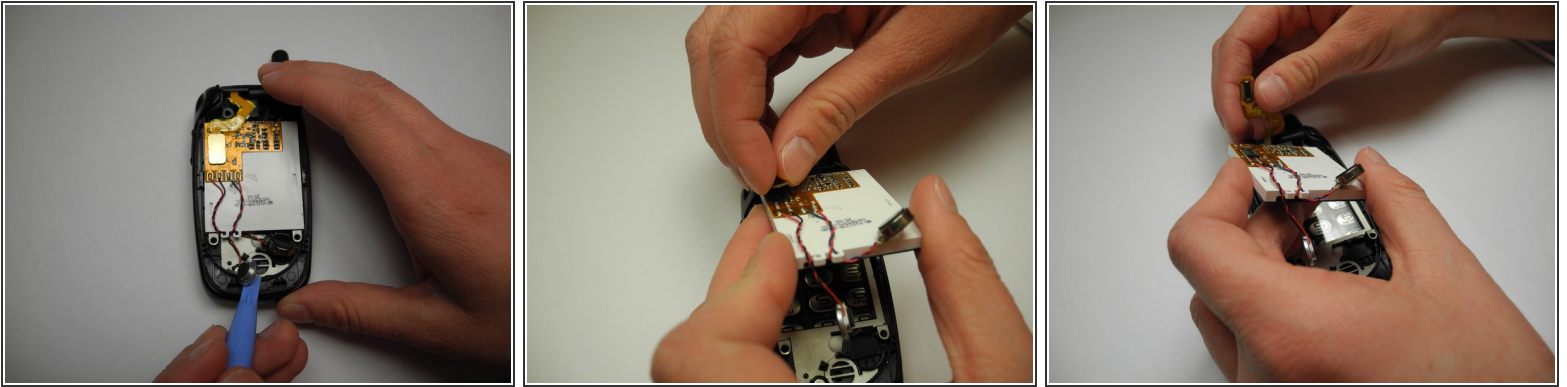

- Remove the phone's speakers by using the plastic opening tool to pry up and away from the device. These speakers will dangle by the wires attached to the board.
- Use your fingernail to detach the ribbon connecting the board to the screen.
- Remove the damaged screen from the device.

## Step 6 — Completing the repair



- Follow steps in reverse order to replace Kyocera OystR's screen.

To reassemble your device, follow these instructions in reverse order.