



Canon PowerShot SD1200 IS Front and Rear Covers Replacement

Remove the front and back covers of your Canon PowerShot SD1200 IS camera.

Written By: Jeff Casper



INTRODUCTION

Use this guide to replace the front and back covers of the Canon PowerShot SD1200 IS camera or to access damaged internal components.

TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front and Rear Covers




- Remove the battery.

Step 2

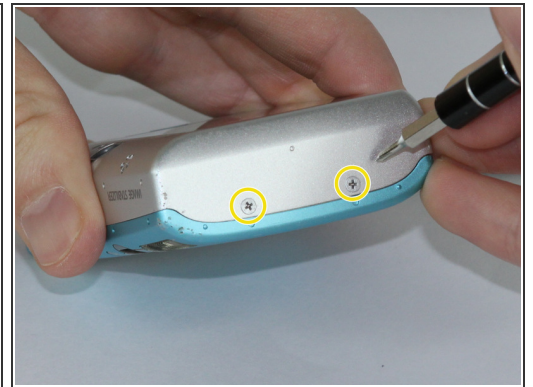

- Remove the two screws from the side of the camera casing with the strap. (4mm Phillips 00)
- Remove the two screws from the bottom of the camera. (4mm Phillips 00)
- Remove the two screws from the right side of the camera opposite the strap. (2mm Phillips 00)

 Step 3

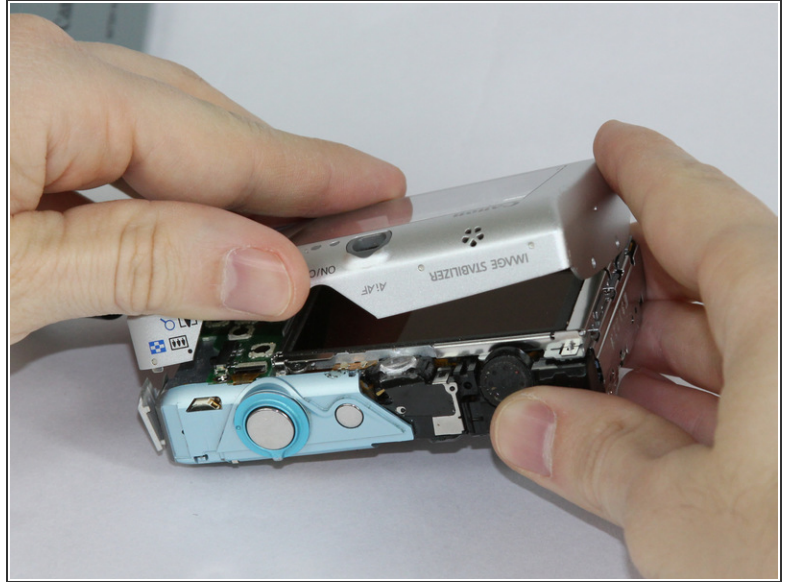

- Pull off the front cover.

i If the top of the cover sticks, use gentle downward pressure on the retention clips above the lens to release.

- Remove the back cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 08:43:37 AM.