



# How to fix a stuck Sony Cyber-shot DSC-P10 lens cover

"This guide will show you how to repair the lens flap on your Sony Cyber-shot DSC-P10 camera."

Written By: Renee



---

## INTRODUCTION

Most of the time the reason for the lens flap not opening or closing is because there is dirt and debris caught in the mechanism. The repair guide will show how to clean out the debris and offer other possible solutions for repair.

---

### TOOLS:

- [Compressed Air](#) (1)
  - [Fine tipped object](#) (1)  
Pencil or pen tip
-


## Step 1 — How to fix a stuck Sony Cyber-shot DSC-P10 lens cover



- Pull back the lens shutters manually if necessary.

ⓘ **NOTE:** A can of compressed air can be found in almost any store

## Step 2

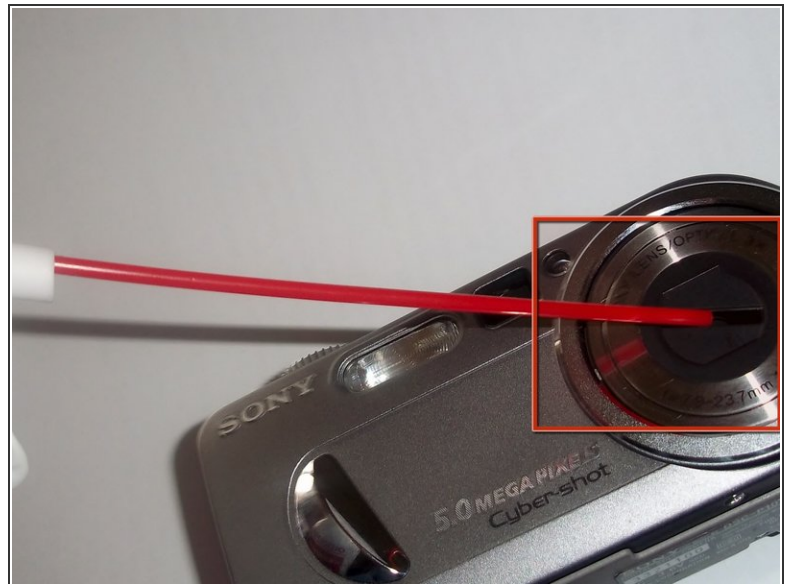

- Blow the area inside the flaps and around them with the can of compressed air.

- **NOTE:** A can of compressed air can be found in almost any store

ⓘ If the flaps don't immediately work, continue to attempt to blow the debris out while periodically checking to see if the problem is fixed

After following this guide, the lens flaps should open and close freely as necessary.

This document was last generated on 2019-07-17 05:42:19 PM.