



Philips DVP642 Top Panel Replacement

You will be removing the top protective panel of the DVD Player for easy access to the inside.

Written By: Nathan Klammer



INTRODUCTION

In this guide, you will locate several screws that hold the top panel in place and remove them. They are all Phillips screws and are simple to remove.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Top Panel



- Remove four 7.5 mm Phillips screws on the both sides (2 on each side).
- Remove five 7.5 mm Phillips screws on the back of the player.

Step 2



- Lift the top panel from the back and remove. It should come off without being forced. There is a lip near the front so you may need to slide the top panel back slightly to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 07:02:05 PM.