



Disassembling Kodak Advantix F350 Back Cover

This tutorial demonstrates how to remove the back cover from the camera.

Written By: David Cottrell



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover



- Turn off the camera.
 - Locate the power switch on the front of the camera below the camera lens.
- Slide the switch to the off position.

Step 2




- Locate the 3 screws that hold the back cover to the camera.
 - One screw is located on the film opener side of the camera.
 - The other screws are located on the opposite side of the camera.

Step 3




- Use the Phillips #00 Precision Screwdriver and remove the screws on the back cover.

Step 4

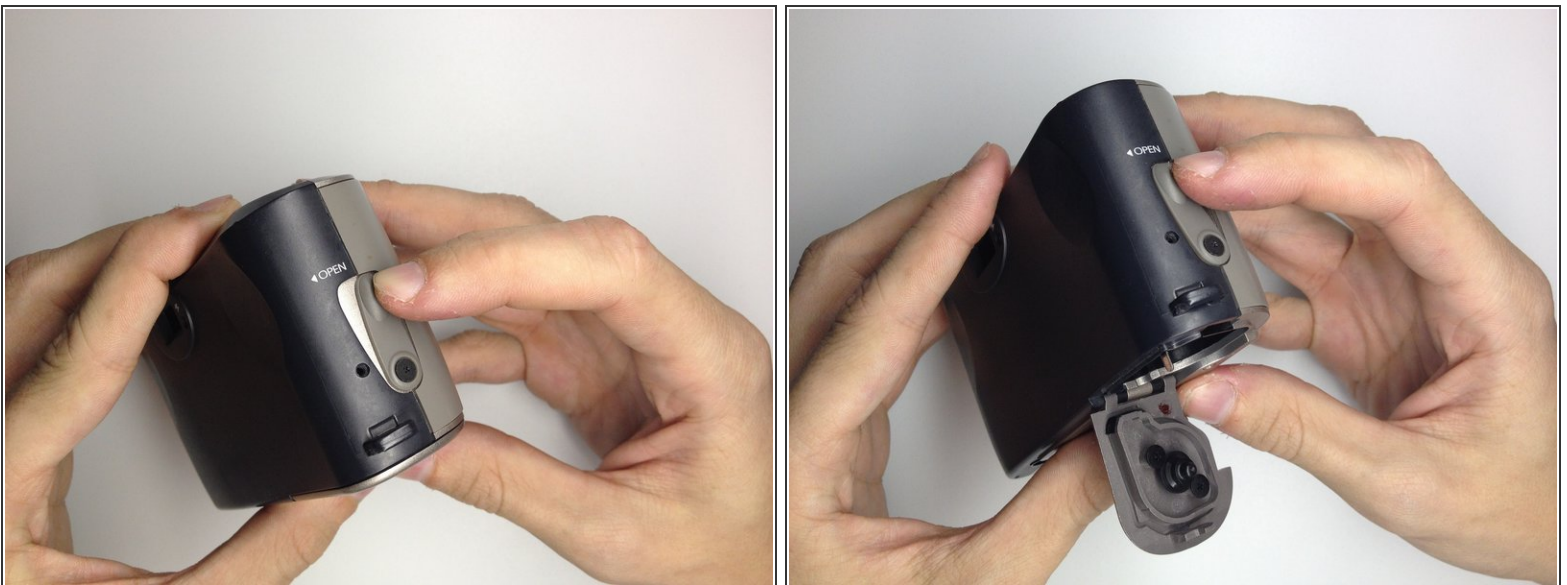


- Open the film door to remove the back cover.
 - Slide the film door lever to the left until the film door opens.

Step 5

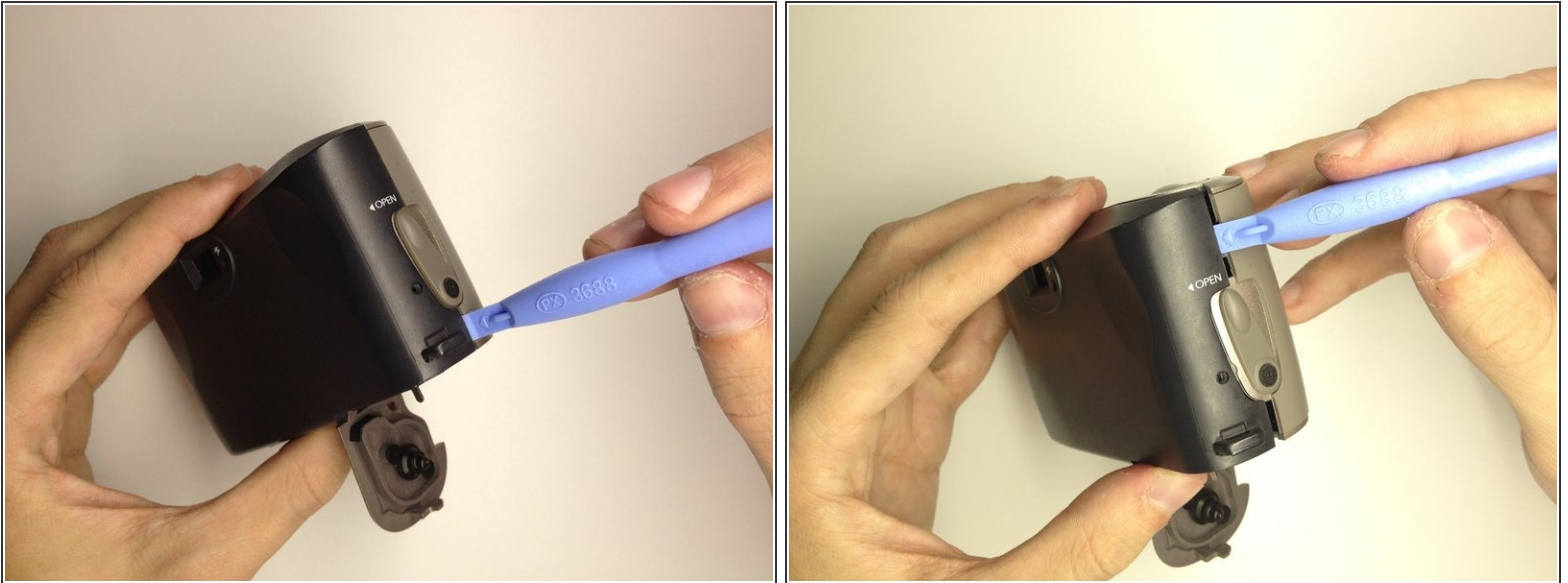

- Use a plastic opening tool to pry the case open until a small gap is present.
 - Repeat this process at the top and bottom of the film door to loosen it.

Step 6

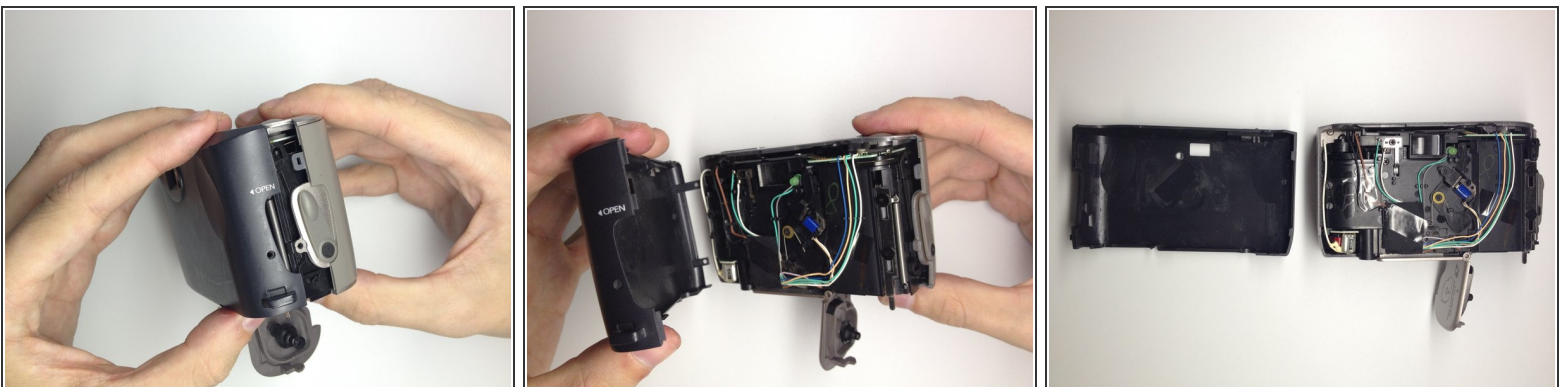

- Grab the top and bottom of the case firmly as shown.
 - Gently remove the back of the camera case with a slight twisting motion.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-18 01:50:59 AM.