



Sony Cyber-shot DSC-P10 LCD Screen Replacement

Replace the LCD screen of your Sony Cyber-shot DSC-P10.

Written By: Adrian



INTRODUCTION

This guide will walk you through how to replace the LCD screen of your Sony Cyber-shot DSC-P10 camera.

TOOLS:



- [64 Bit Driver Kit](#) (1)
-

Step 1 — LCD Screen



- Remove the two screws on the top of the camera.
- Remove the two screws on the bottom of the camera.
- Remove the rear cover.

Step 2

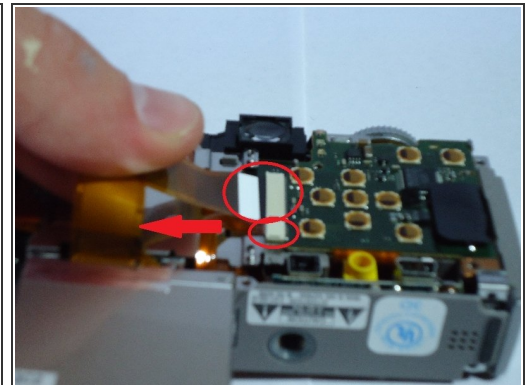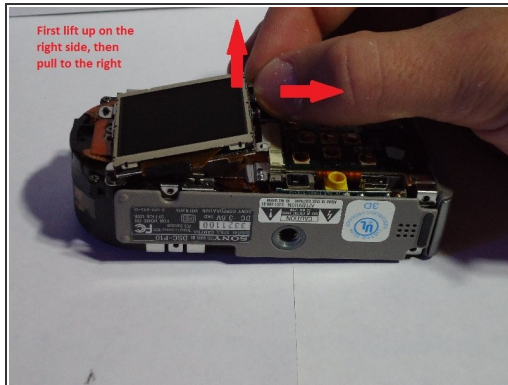

- Peel the strip of black padding off of the screw.
- Remove the screw.
- Lift the right side of the screen up, then pull the screen to the right to free the LCD screen.
- Carefully pull on the ribbon circuits to remove them.
- You have successfully removed the LCD screen!!

To reassemble your device, follow these instructions in reverse order.

