



Disassembling Apple AirPort Extreme Model A1034 Outer Case

In this guide you will be shown how to remove the outer case on the Apple AirPort Extreme Model A1034.

Written By: Travis Go



INTRODUCTION

This is a step-by-step guide to remove the outer case on the AirPort Extreme Model A1034.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [T7 Torx Screwdriver](#) (1)
-

Step 1 — Outer Case




- Remove the three 14.3mm T7 Torx screws from the bottom of AirPort.

Step 2




- Remove the 5.1mm Phillips screw from the bottom of the AirPort. This screw is located under the identification sticker. You will have to remove the sticker or make a hole to remove it.

Step 3

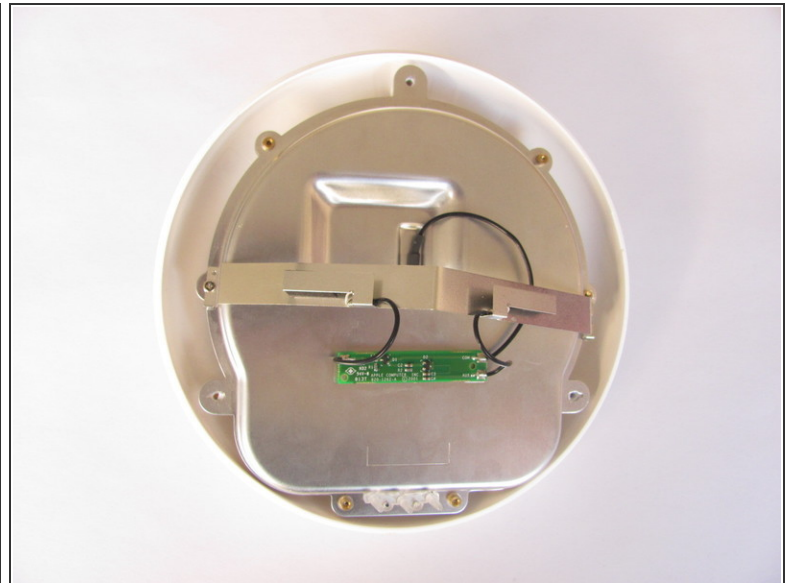

- Lift the bottom and top casing straight apart and then lift metal casing straight up from the bottom plastic casing.

Step 4

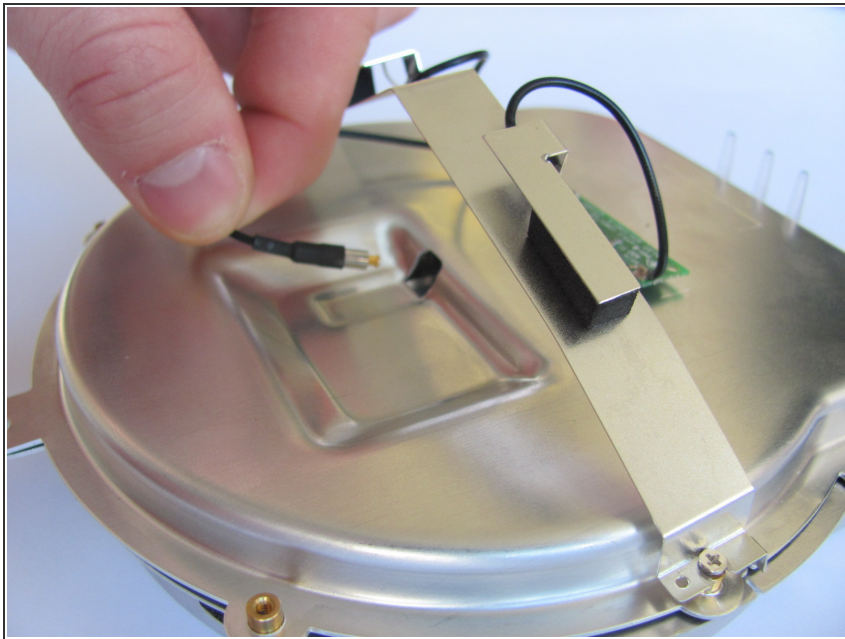

- Unplug the black connector on the top of the metal casing by gently pulling horizontally.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 05:59:33 PM.