



Linksys WRT54G Casing Replacement

This guide instructs users how to remove the outer casing in order to access functional components inside.

Written By: Nina Levine



INTRODUCTION

If, after reading through this guide, you are still in need of assistance, please refer back to the [device page](#) or the [troubleshooting page](#).

Step 1 — Antennas



- Unfold the antennas straight away from the device.

Step 2



- Remove the black caps from the antennas by pulling them away from the device.

Step 3



- Unscrew each of the antennas from the wireless device.

Step 4 — Casing



- Using a bit of force, remove the blue plastic case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 10:47:19 AM.