



# iMac G4 17 800 MHz EMC 1936 Airport Card Replacement

Removing the Airport Card from Computer

Written By: David Hunter



---

## INTRODUCTION

 
Remove all electrical wires from the computer, and lay the computer flat on its screen. The computer should rest on a smooth, padded surface.

---

### TOOLS:


- [captive screw](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Bottom Plate

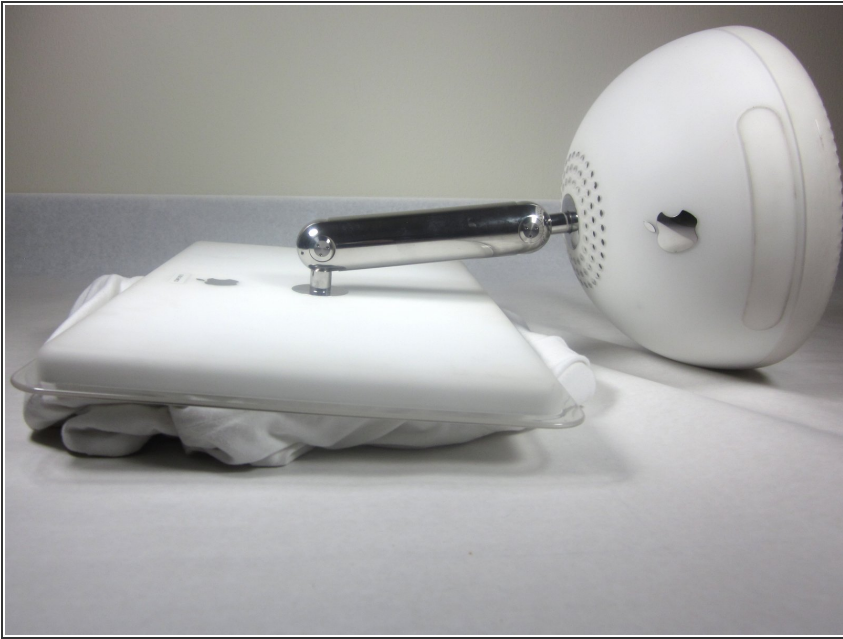

- Unplug all the cables from the computer, including the power cable. Lay the computer face-down, supporting the neck and base with a soft cloth under the screen.

## Step 2

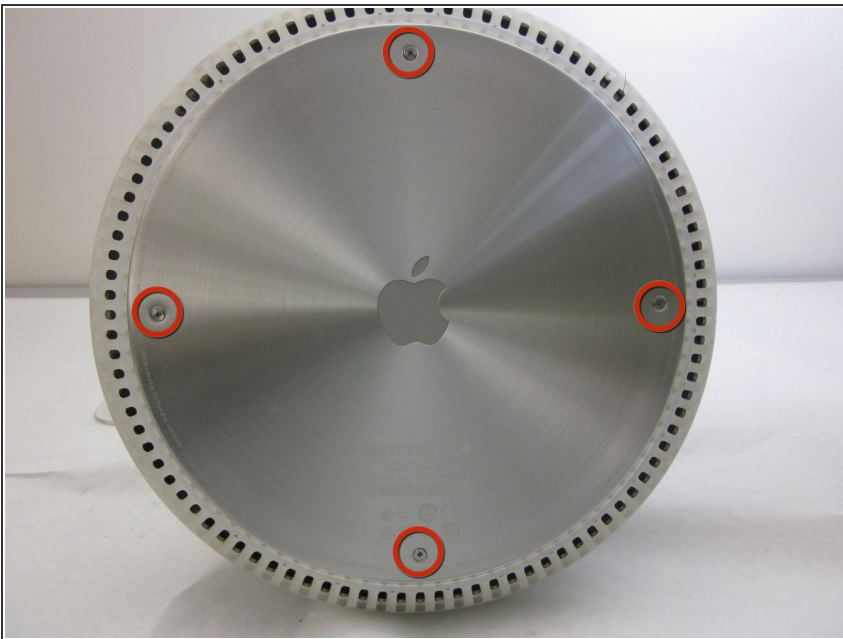 

- Loosen the four Phillips #0 screws.

## Step 3



- Carefully remove the base access panel.

To reassemble your device, follow these instructions in reverse order.