



Canon PowerShot SD400 LCD Replacement

This guide will walk you through replacing the LCD on a Canon PowerShot SD400.

Written By: Yi Huang Ke



 **TOOLS:**

- Phillips #00 Screwdriver (1)
-

Step 1 — LCD




- There are 6 screws total that you need to remove in order to open the case (bottom and both sides, each has 2 screws)

Step 2





- Carefully remove the exterior screws using a screwdriver and put them somewhere safe so they will not get lost.

Step 3

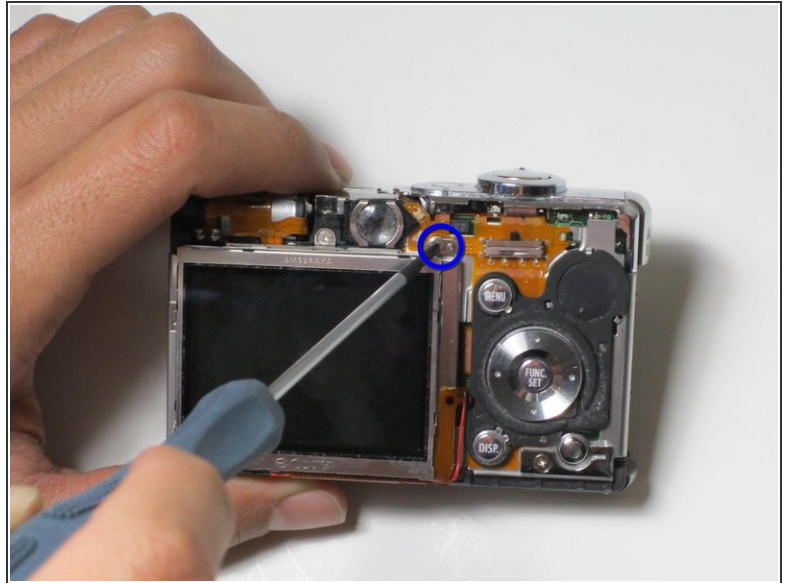

- Remove the interior screws using screwdriver

Step 4

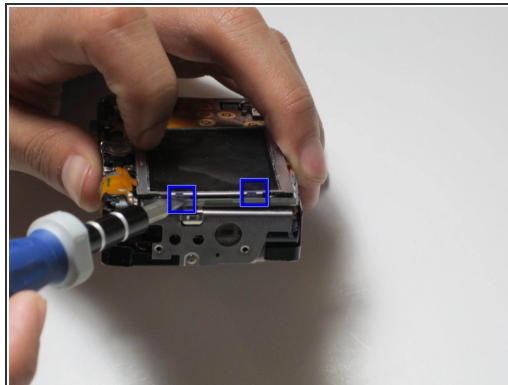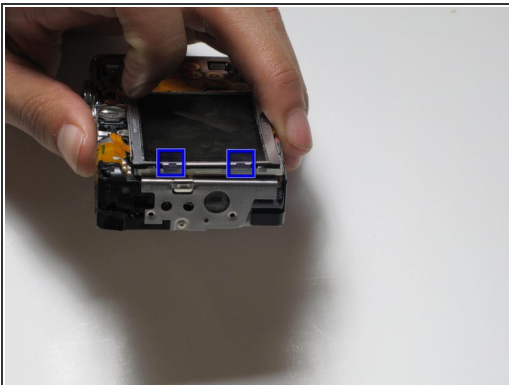

- Insert the flat-head screwdriver under the LCD screen into the two clips.

⚠ Lift up the LCD screen. Be careful not to rip the screen off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-23 07:13:13 PM.