



Lite-On LightScribe SHM-165H6S Chassis Replacement

Removing the top and bottom covers of the drive.

Written By: James Biggs



INTRODUCTION

Remove the top cover of the optical drive to access the internals and replace any malfunctioning components.

TOOLS:




- [Paper Clip](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Chassis



- Insert an open paper clip into the small hole on the left side of the faceplate.
- After the tray opens, extend it fully.

Step 2

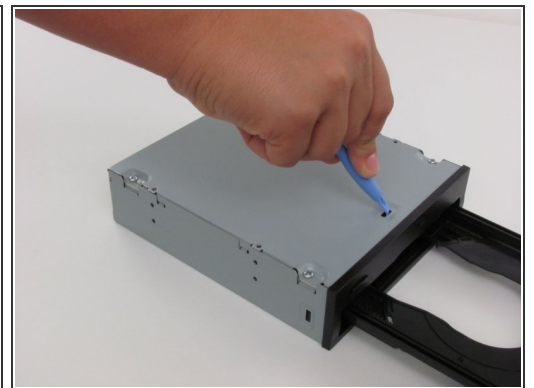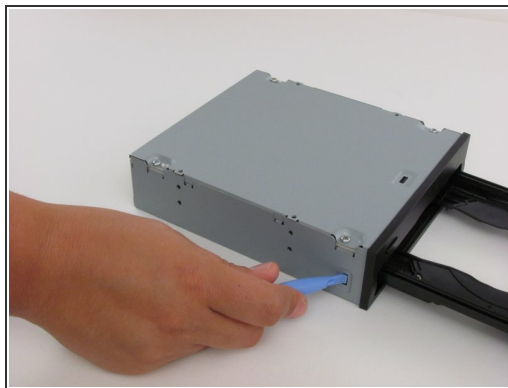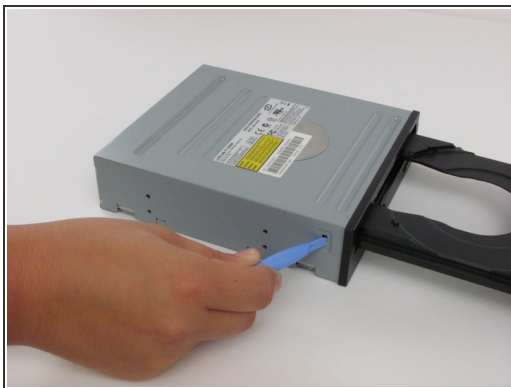


- Use an opening device to push in the black tabs on the left, right and bottom of the outer chassis to unhook the faceplate.

Step 3




- Pull the faceplate away from the main chassis.

Step 4

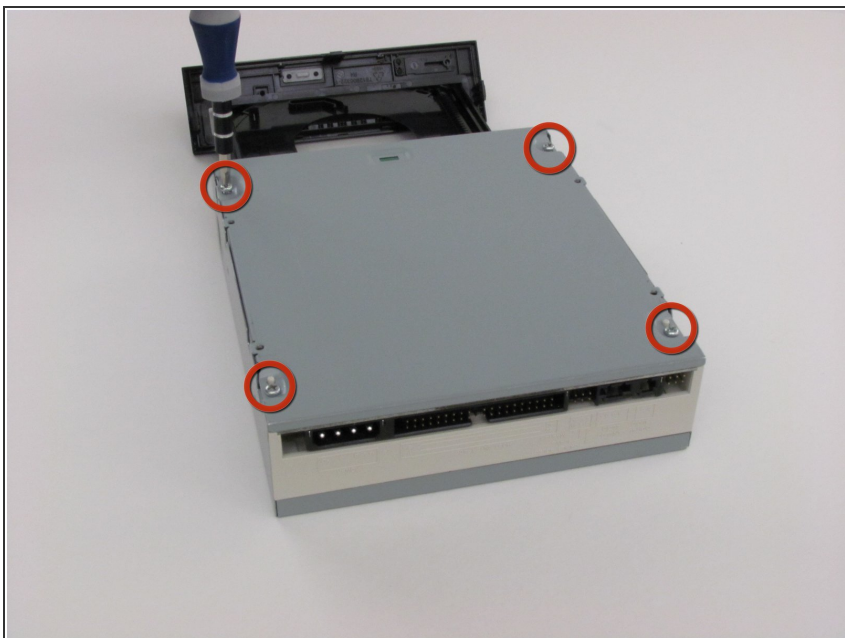

- Unscrew the four 8.5 mm screws on the bottom chassis using a Philips #2 screwdriver.

Step 5

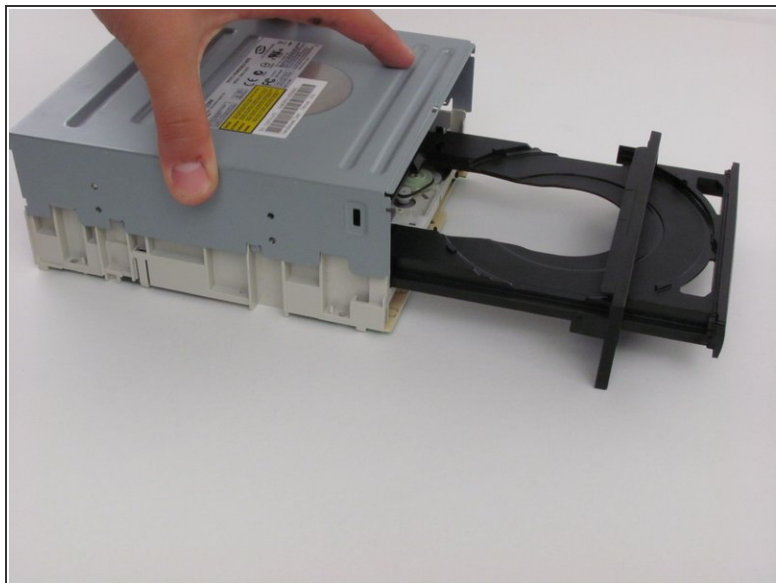

- Lift the top and bottom chassis straight up in order to remove them.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-24 03:00:01 AM.