



Visual Land Prestige Elite 7Q Side Buttons Replacement

Replace the volume up/down and power buttons on your Visual Land Prestige Elite 7Q.

Written By: Sabrina Scholten



INTRODUCTION

Complete the following guide to replace the power button and the volume buttons on the side of your tablet.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Side Buttons



- At the bottom of the tablet, remove the two 3.6mm screws with a Phillips #000 screwdriver.

Step 2




- Wedge a plastic opening tool into the edges of the tablet to pry it open.

Step 3



- Using a metal spudger and/or your fingers, press the power button in and lift the outside tab.

Step 4

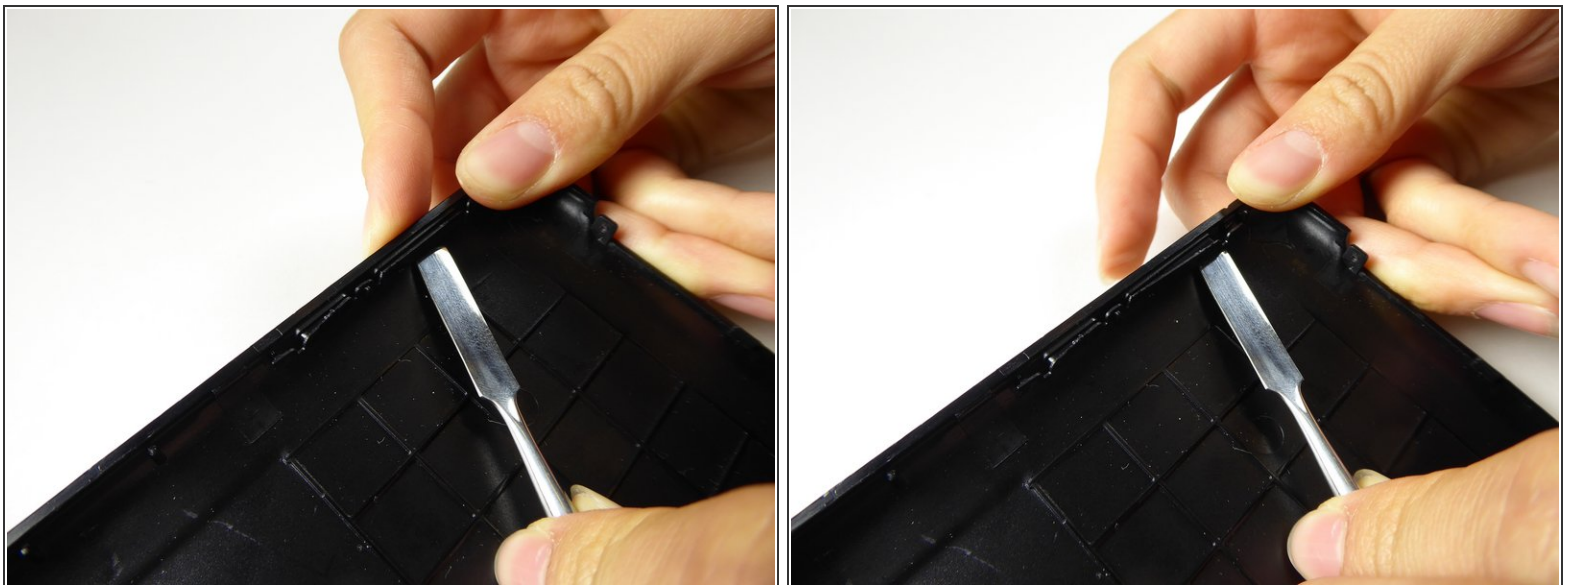

- Using a metal spudger and/or your fingers, press the volume button in and lift the outside tab.

Step 5



- Using the metal spudger, dislodge and lift the power and volume buttons

To reassemble your device, follow these instructions in reverse order.