



Acer Aspire 5734z-4836 Battery Replacement

Replace the battery on the Acer Aspire 5734z-4836.

Written By: Steven Loon



INTRODUCTION


All laptops follow similar procedures for replacing batteries. Always remove your laptop's battery before performing any other repairs.

Step 1 — Battery




- ⚠ Before removing the battery, power off your laptop and disconnect the AC adapter.
- Flip your laptop on its back so the battery is facing up and the hinges are facing away from you.

Step 2

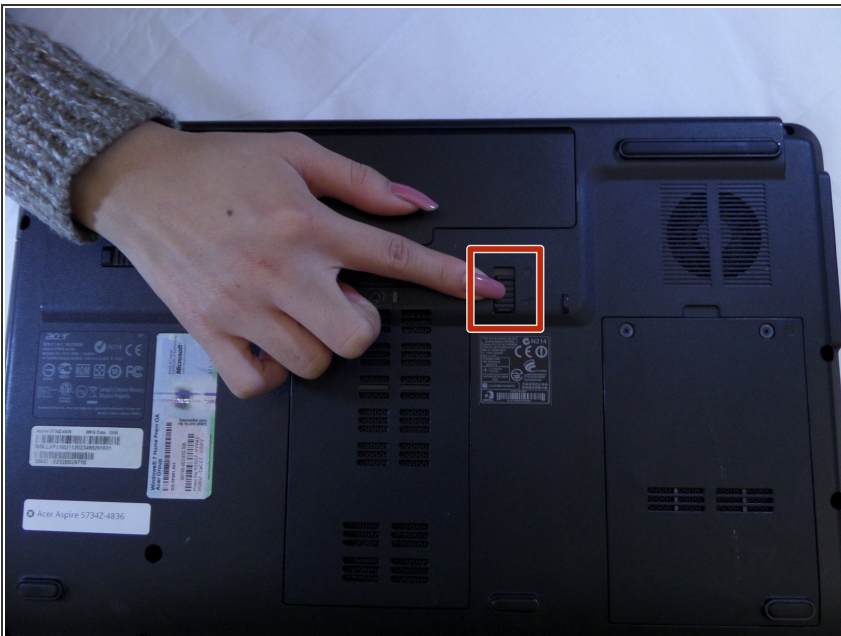

- Slide the right latch down to unlock the battery.

Step 3

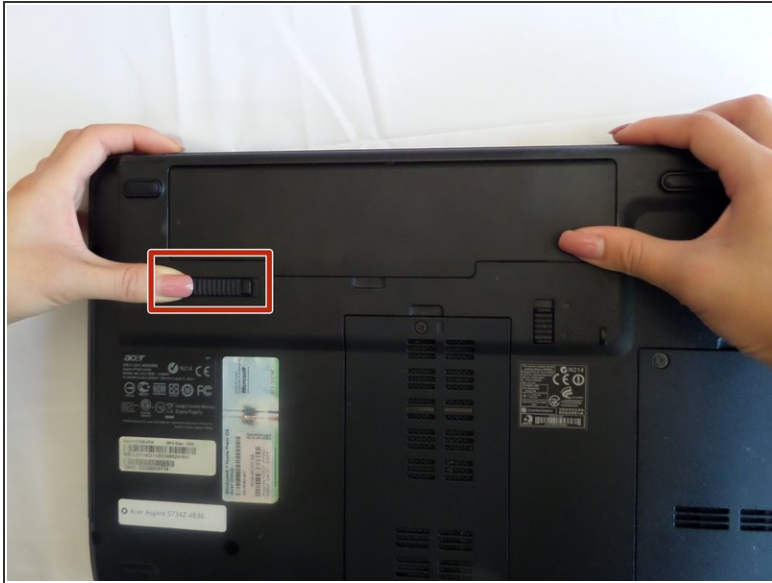

- Slide and hold the left latch below the battery.
- While holding this latch in place, pry the battery up from its bottom edge.
- Lift the old battery out of its compartment.

To reassemble your device, follow these instructions in reverse order.