



# Makita XPH01 Battery Replacement

This guide will show you how to detach the battery from the Makita XPH01 cordless drill.

Written By: Eric Herwatt



## INTRODUCTION

If your battery has issues, this guide will walk you through how to remove it from the Makita XPH01 cordless drill. Step 1 will show how to orient and handle your device, and Steps 2 and 3 show how to detach the battery. This guide requires no tools.

## Step 1 — Battery



- Hold the drill upright.
- Place your finger on the white battery-release button.

## Step 2



- Press and hold the white release button located on the front of the battery.

### Step 3



- Slide the battery forward while pressing down on the white battery-release button.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-18 06:34:33 AM.