



Nintendo 3DS 2015 Battery Replacement

Remove the battery in the Nintendo 3DS 2015 to replace it.

Written By: Tyler Starr



INTRODUCTION

If your battery isn't holding a charge or won't charge you may consider replacing the battery. Press hard and go slow on the screws in the back panel they are soft and strip easily.


TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:


- [New Nintendo 3DS Battery](#) (1)
-

Step 1 — Battery

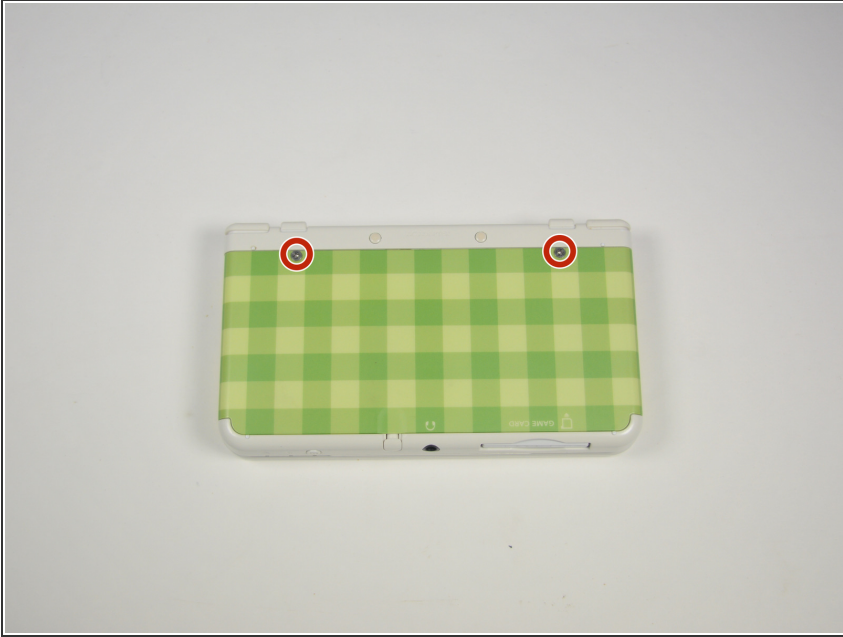

- Unscrew the two 3mm Phillips #0 head screws along the top edge of the device.
- ⚠ The screws on the back panel strip easily. Go slowly and press down firmly.
- ⓘ The screws on the back panel are held in by locking washers, so they won't come out of the back panel.

Step 2

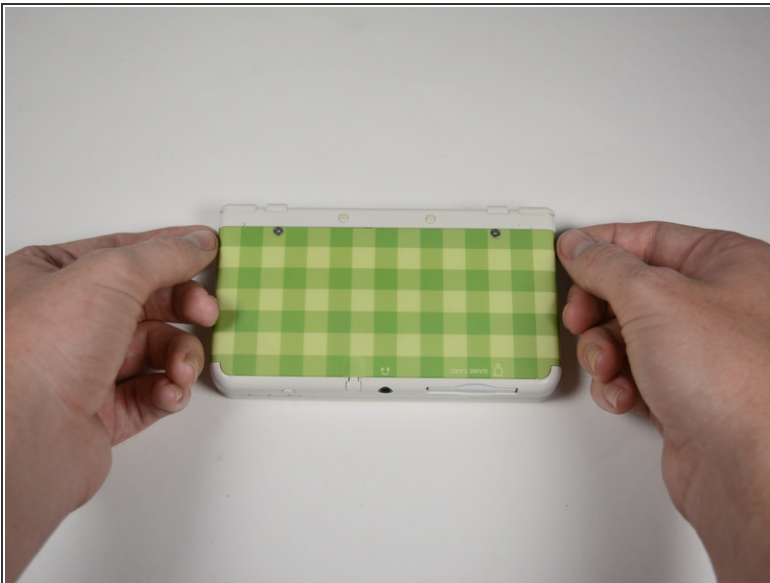

- Pull the top corner tabs of the front face plate outward and towards you.
- Pull the faceplate up and out of the slots at the bottom of the device.
- Set aside the back faceplate.

Step 3



- Insert a plastic opening tool into the notch at the top of the battery.
- Pry the battery up with the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 07:10:24 AM.