



How to remove Magnavox MWD200F cover

This guide will show you how to take apart the device in order to complete maintenance repairs and cleaning.

Written By: Taryn



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — How to remove Magnavox MWD200F cover




- Using a Philips screwdriver, remove the two screws on the top of the device, towards the back.

Step 2



- Remove the plastic cover by pulling up on the back and away from the faceplate.

Step 3

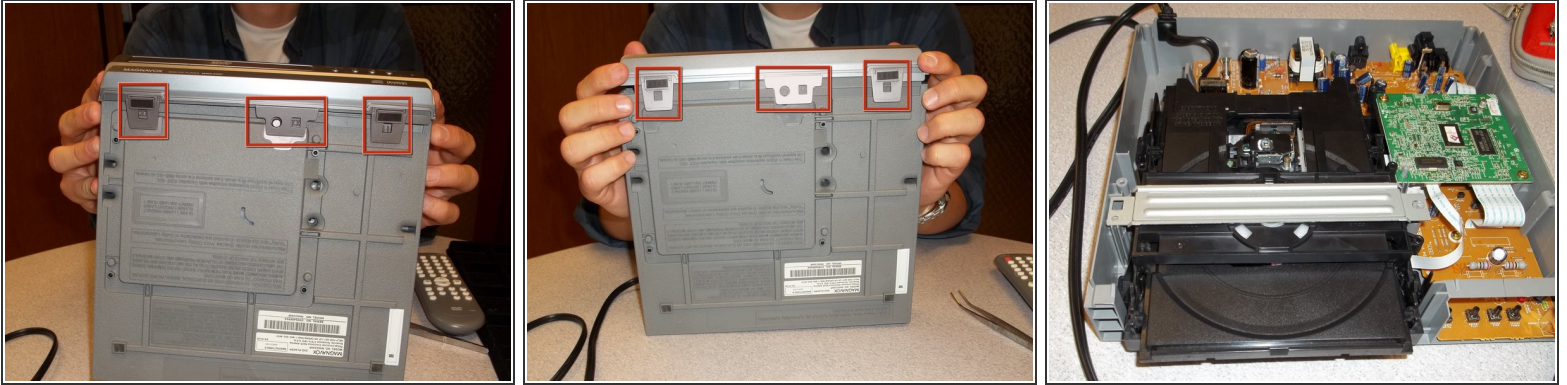

- Remove the faceplate by unclipping the latches on the bottom of the device.
- Once it's unlatched, pull the faceplate off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-22 05:02:26 AM.