



# RCA Small Wonders Camcorder CC176 Viewfinder Replacement

Step by step instructions directing the users how to replace a faulty viewfinder on an RCA Small Wonders Camcorder CC176.

Written By: Allison Baudoin



---

## INTRODUCTION

In order to replace the viewfinder on your RCA Small Wonders Camcorder CC176, it only takes a small flathead screwdriver, a safe place to keep the screws that you will take out of the camcorder, and a little bit of patience.

---

### TOOLS:

 
- [Essential Electronics Toolkit](#) (1)
-

## Step 1 — Viewfinder





- Remove the 5 screws that secure the control panel (located on the top of the device) by using your small flathead screwdriver.
- Loosen the panel from the device until you are able to remove it.

## Step 2

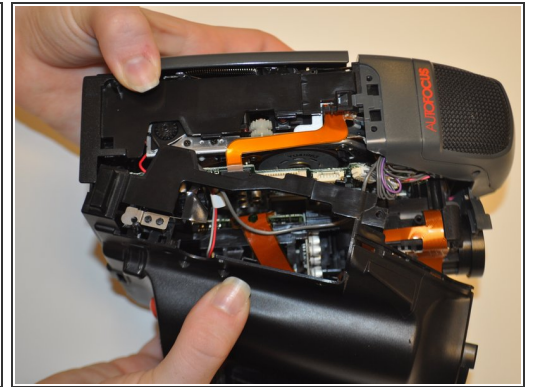

- Remove the remaining 21 screws on the camcorder.
- Begin separating the plastic casing from the inner components of the device.

### Step 3

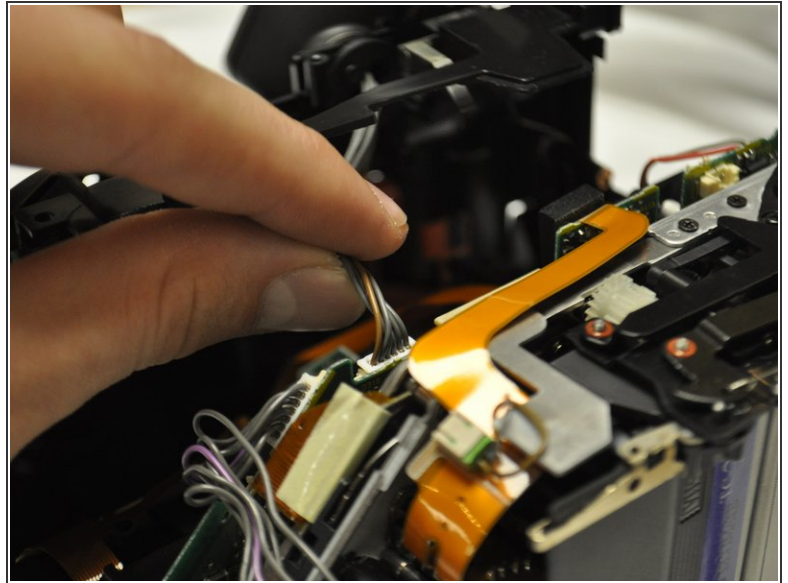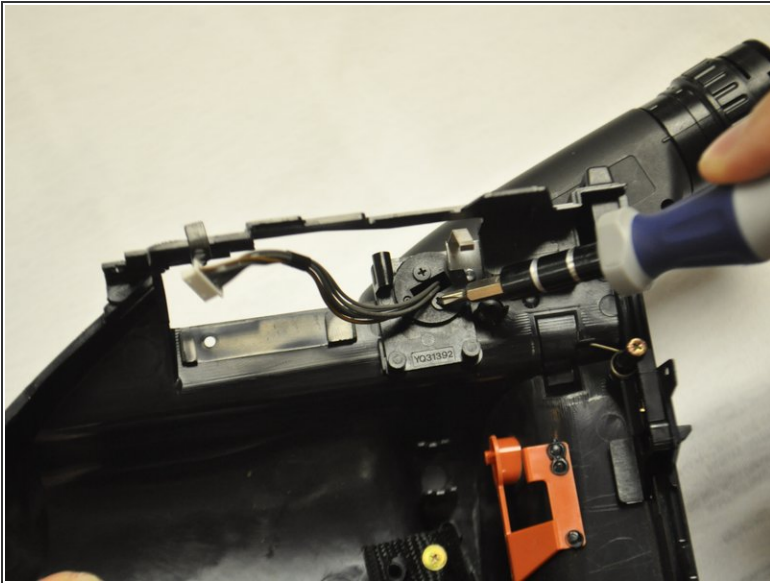  

- Grasping the viewfinder in hand, carefully remove the two screws that secure the mounting device.
- Locate the gray electrical cord that connects the viewfinder to the inner components of the camera. Gently unplug the gray cord and loosen the viewfinder from the device.

### Step 4



- Separate the viewfinder from the device and feed the gray cord through the hole in the plastic casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-19 06:58:23 AM.