



# RCA Small Wonders Camcorder CC176 Battery Replacement

Step by step instructions describing how to change the battery component of an RCA Small Wonders Camcorder cc176

Written By: Allison Baudoin



---

## **INTRODUCTION**

RCA Small Wonders Camcorder cc176

May 1993

## Step 1 — Battery



- Locate battery component along back end of the device.

## Step 2



- Holding battery device firmly between thumb and forefinger, apply pressure to the battery component, sliding the plastic to the left.
- Lift up to remove the battery component from the device, separating it from the camera device completely.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-17 09:55:54 AM.