



# Kodak Signet 35 Lens Replacement

This guide will cover the procedures for replacing the lens for the Kodak Signet 35.


Written By: Brian Skinner



## **INTRODUCTION**

If your lens is dirty or damaged, use this guide to replace the lens assembly.

## Step 1 — Lens

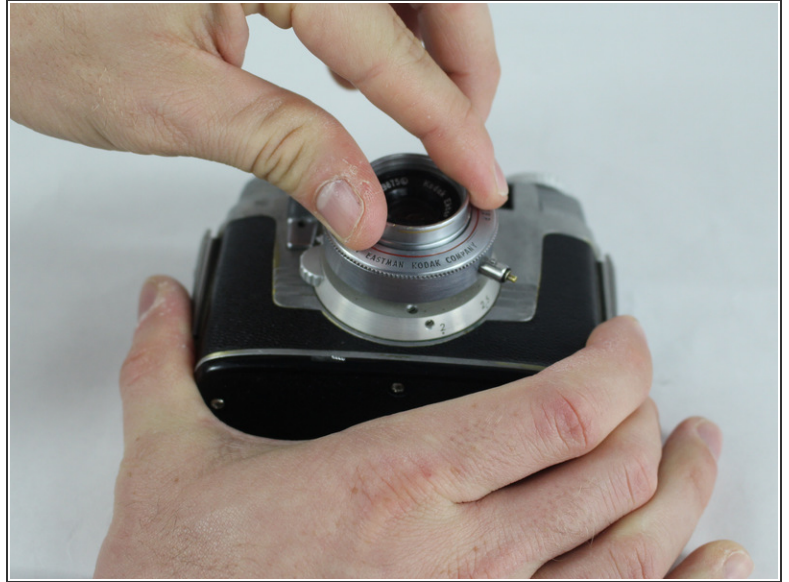

- Place the camera on its back with the lens facing up.
  - Firmly grip the lens assembly with one hand, and hold the camera with the other. Turn the lens assembly counterclockwise until it is free.
- i** If the lens assembly has never been removed, it may initially require some force for it to turn.

## Step 2



- Remove the old lens and replace it with the new lens.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 12:57:47 PM.