



HP Mini 110-3131dx Screen Replacement

Improve the quality of display for your HP Mini 110-3131dx by replacing the screen.

Written By: aarondcollege



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Completely turn off the laptop before trying to remove the battery.
- Turn the laptop upside down, and find the sliding tabs located on the battery.
- Slide both tabs in an inward direction then slide the battery away from the laptop

Step 2 — Screen



- Slightly tilt the screen downward.
 - ⓘ The screen is attached by internal clips and adhesive, which means that some force will be necessary for this step.
- Use the plastic opening tool to force the screen bezel from the screen.
- Locate the eight silver 2.9mm screws attaching the screen to the lid.
- Using a PH1 philips head screwdriver detach the screws.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-03-02 12:08:00 PM.