



# Creative Zen V Plus Control Panel Disassembly

Instructions how to remove the control pad cover panel on the Creative Zen V Plus.

Written By: Brock Schaffer



## INTRODUCTION

Instructions how to remove the control pad cover panel on the Creative Zen V Plus.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Control Panel



- Locate the groove along side the device where the control panel cover plate are seated.
- Using the iFixit opening tool, place the skinny flat side of tool inside groove and with a twisting motion, pry the mating surfaces apart.
- Once to two surface have detached, gently pull the two surfaces apart with your fingers.

Place the panel on top in it's original position and firmly press back into place .

This document was last generated on 2017-06-20 04:20:46 AM.