



Dell Inspiron M5110 Battery Replacement

The instructions in this guide will cover battery removal.

Written By: Cody Flynn



Step 1 — Battery




- Shut down the computer and turn it upside down.

Step 2



- Slide both of the battery release latches in towards the center of the computer.

Step 3

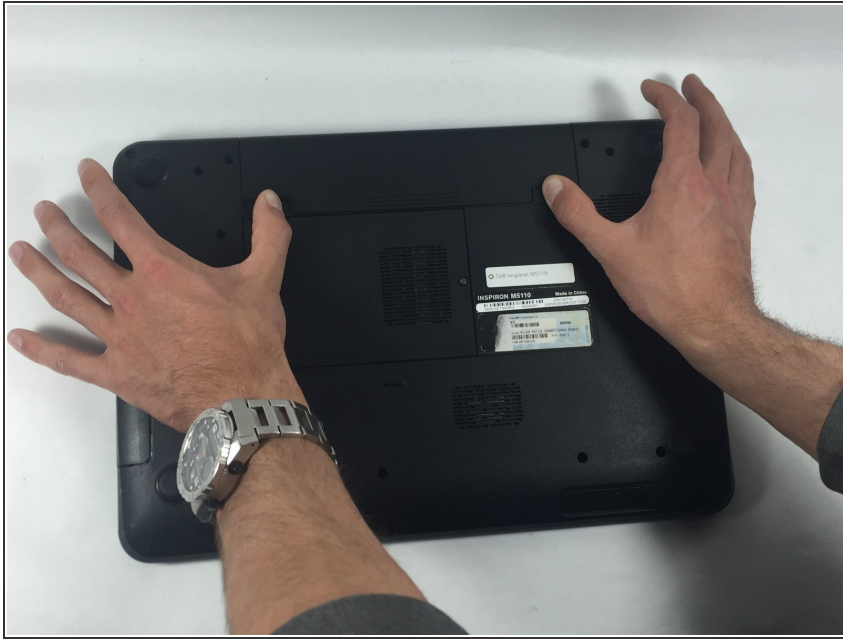

- Slide and lift the battery up and out from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-18 06:24:44 PM.