




Nokia Lumia 830 Main Speaker Replacement

This guide will show you how to remove and replace the main speaker at the bottom of your Nokia Lumia 830.

Written By: saydeking

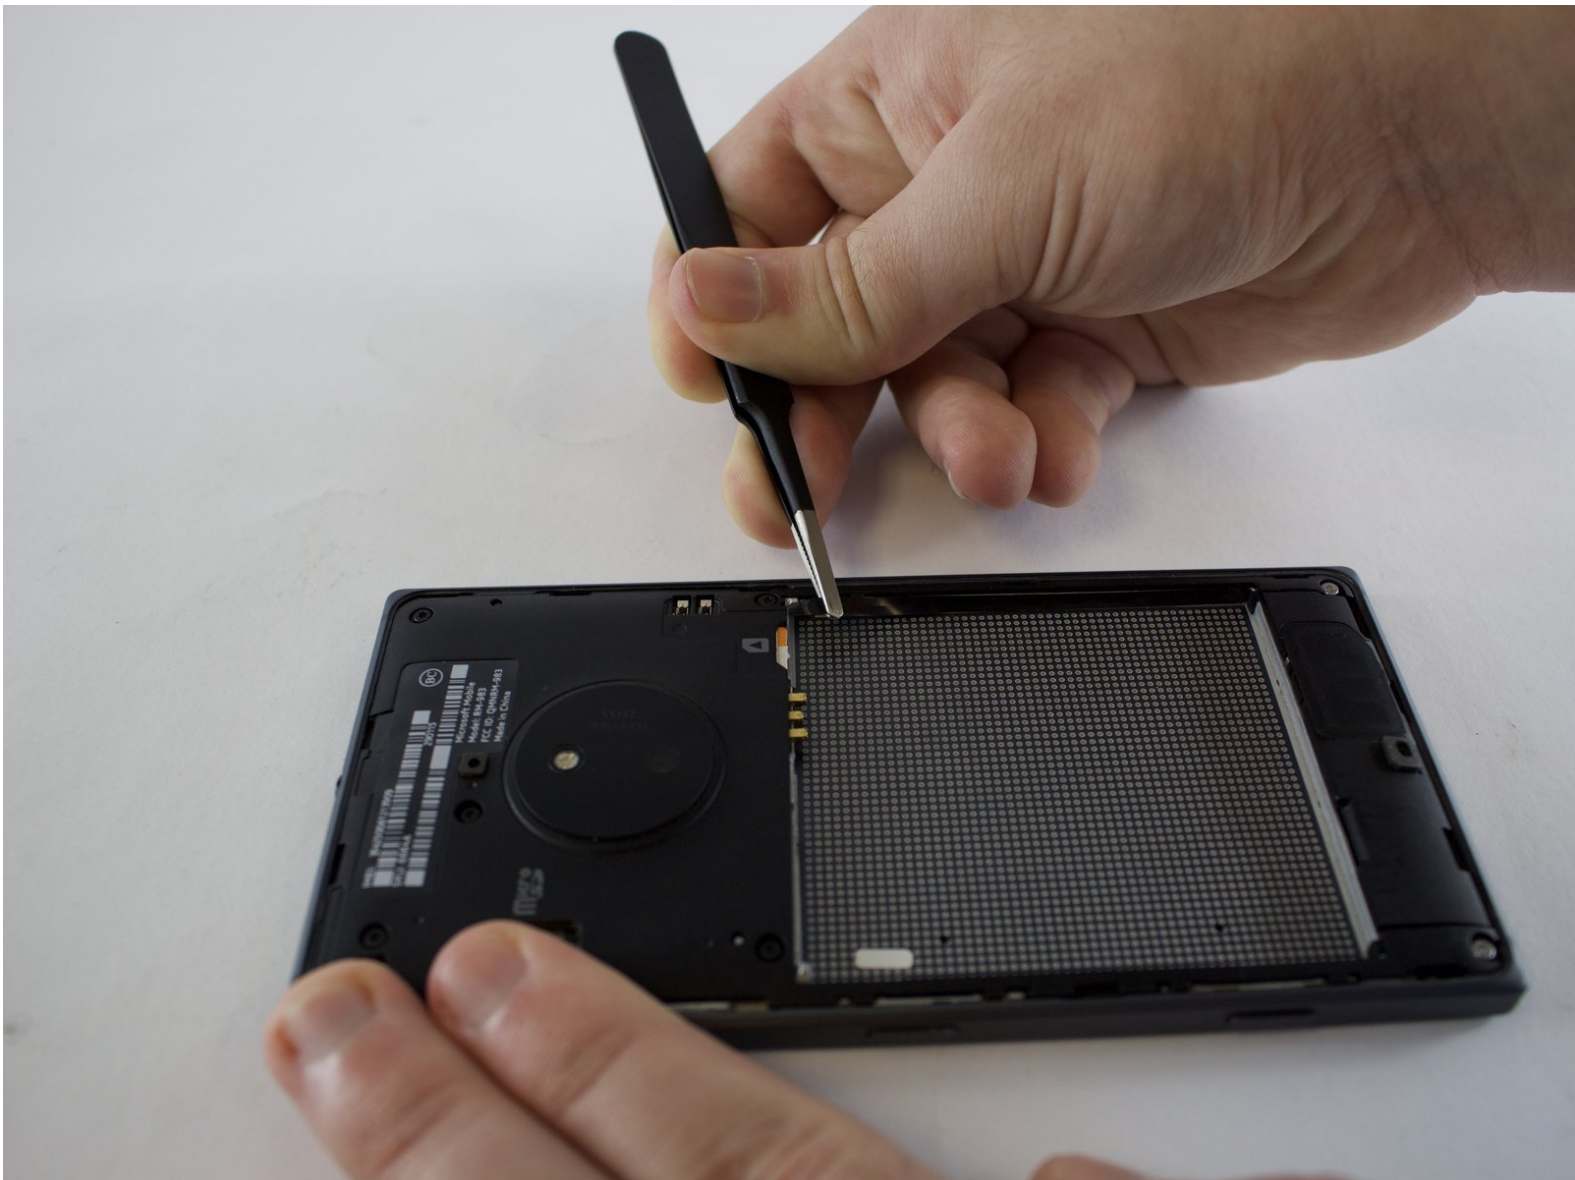

INTRODUCTION

If the speaker function on your Nokia Lumia 830 is not working properly and you are unable to play audio aloud, you may have a problem with your main speaker. If you need to replace it, this guide will walk you through it.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery





- Place the phone with the screen facing down.
- Remove the back cover by placing your fingernail or plastic opening tool under the slotted indent at the bottom of the phone.

Step 2

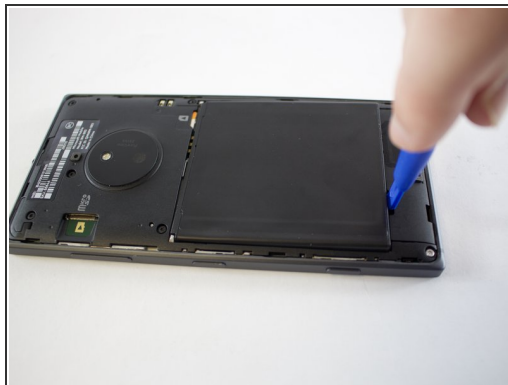



- Carefully remove the battery by placing the plastic opening tool underneath the indent at the bottom of the battery, and pry it up.
- ⓘ There may be adhesive underneath the battery to keep it in place, this may make it a bit difficult to remove the battery.

Step 3 — Main Speaker

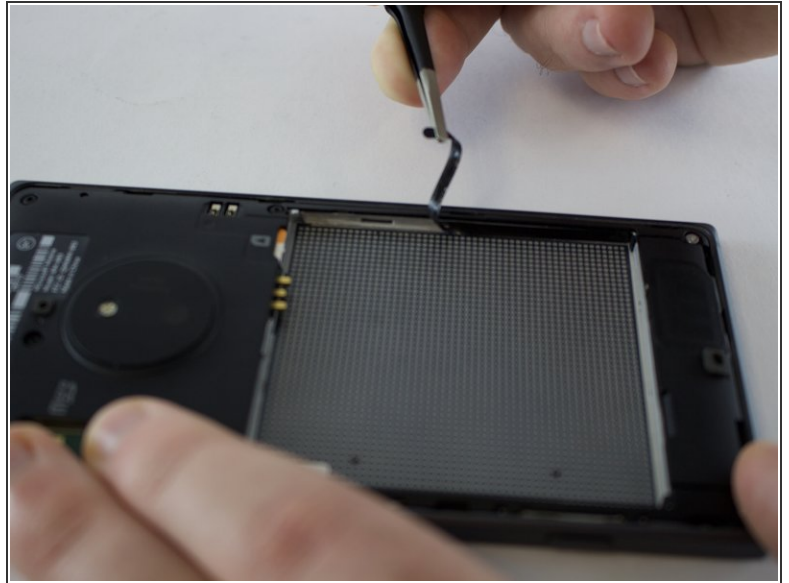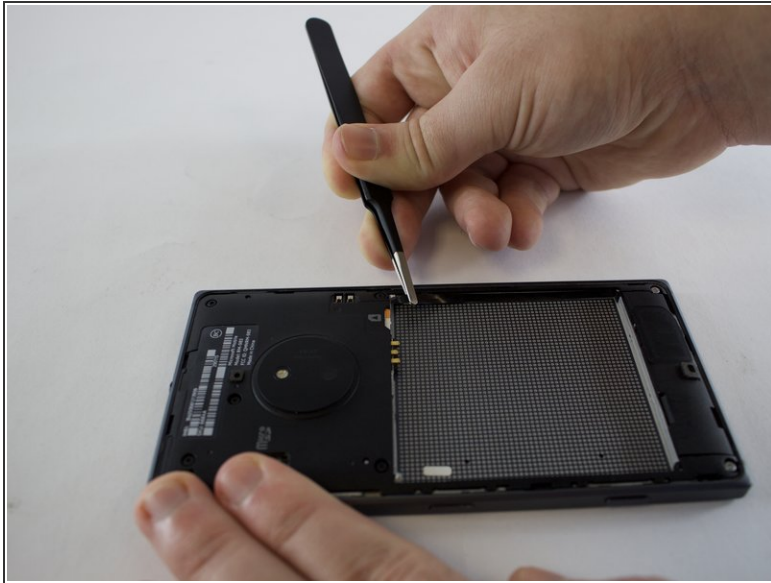

- Remove the black strips on both sides of the battery compartment.


Step 4

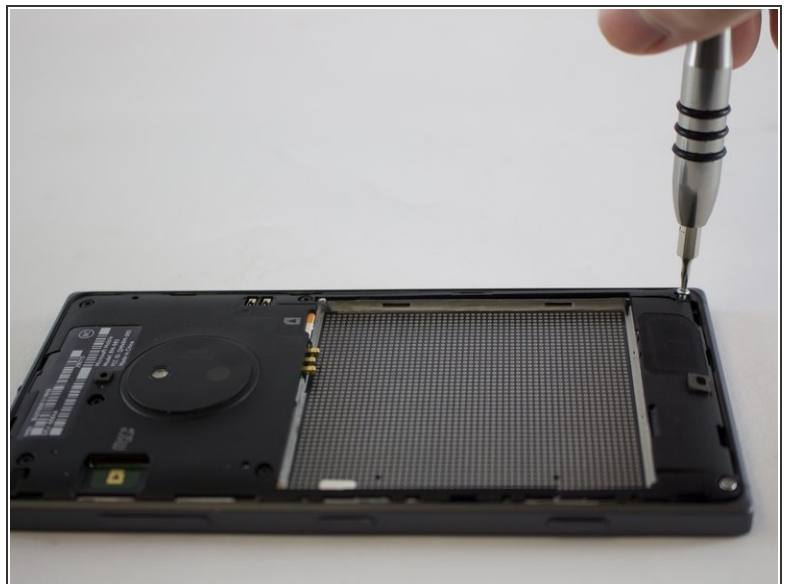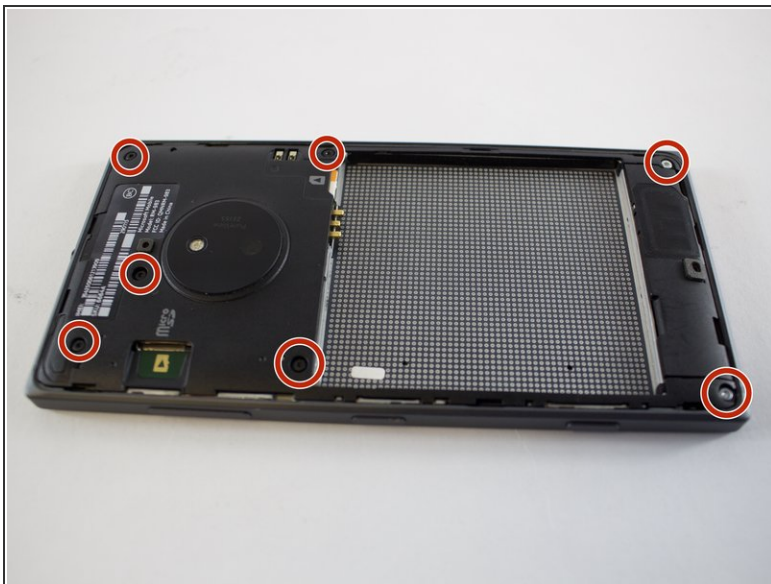

- Remove the two 3.9mm silver screws from the bottom corner of the phone. Then remove the five 2.5mm black screws from top to bottom of the phone.


ⓘ All of the screws take a t5 star screwdriver.

Step 5

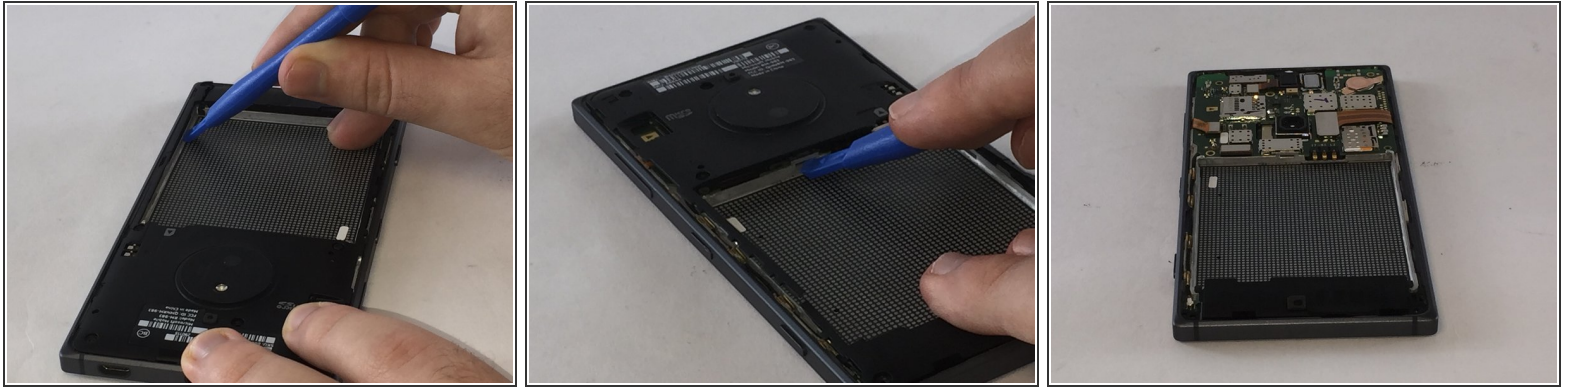

- Use the plastic opening tool to push into the slots holding the backing in place.
- All five slots are along the inner wall of the battery compartment. Push the slots on the sides first before pushing the slot on the top.
- Remove the backing from the frame, making sure to lift the bottom portion away from the phone, to allow the top to slide out of place.

Step 6

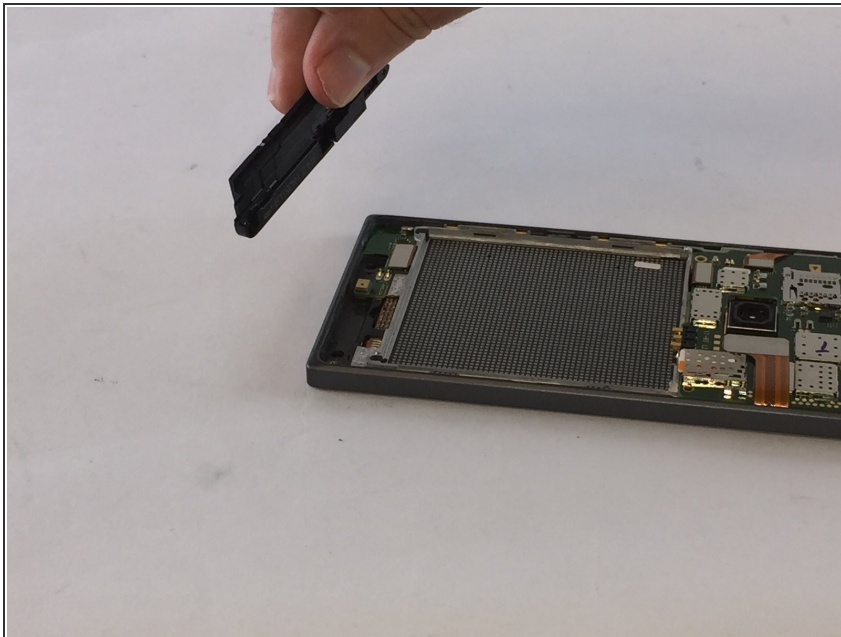

- Lift the speaker out of the phone. You may need to wiggle the speaker loose.

To reassemble your device, follow these instructions in reverse order.

