




Nokia Lumia 830 Main Speaker Replacement

This guide will show you how to remove and replace the main speaker at the bottom of your Nokia Lumia 830.

Written By: saydeking

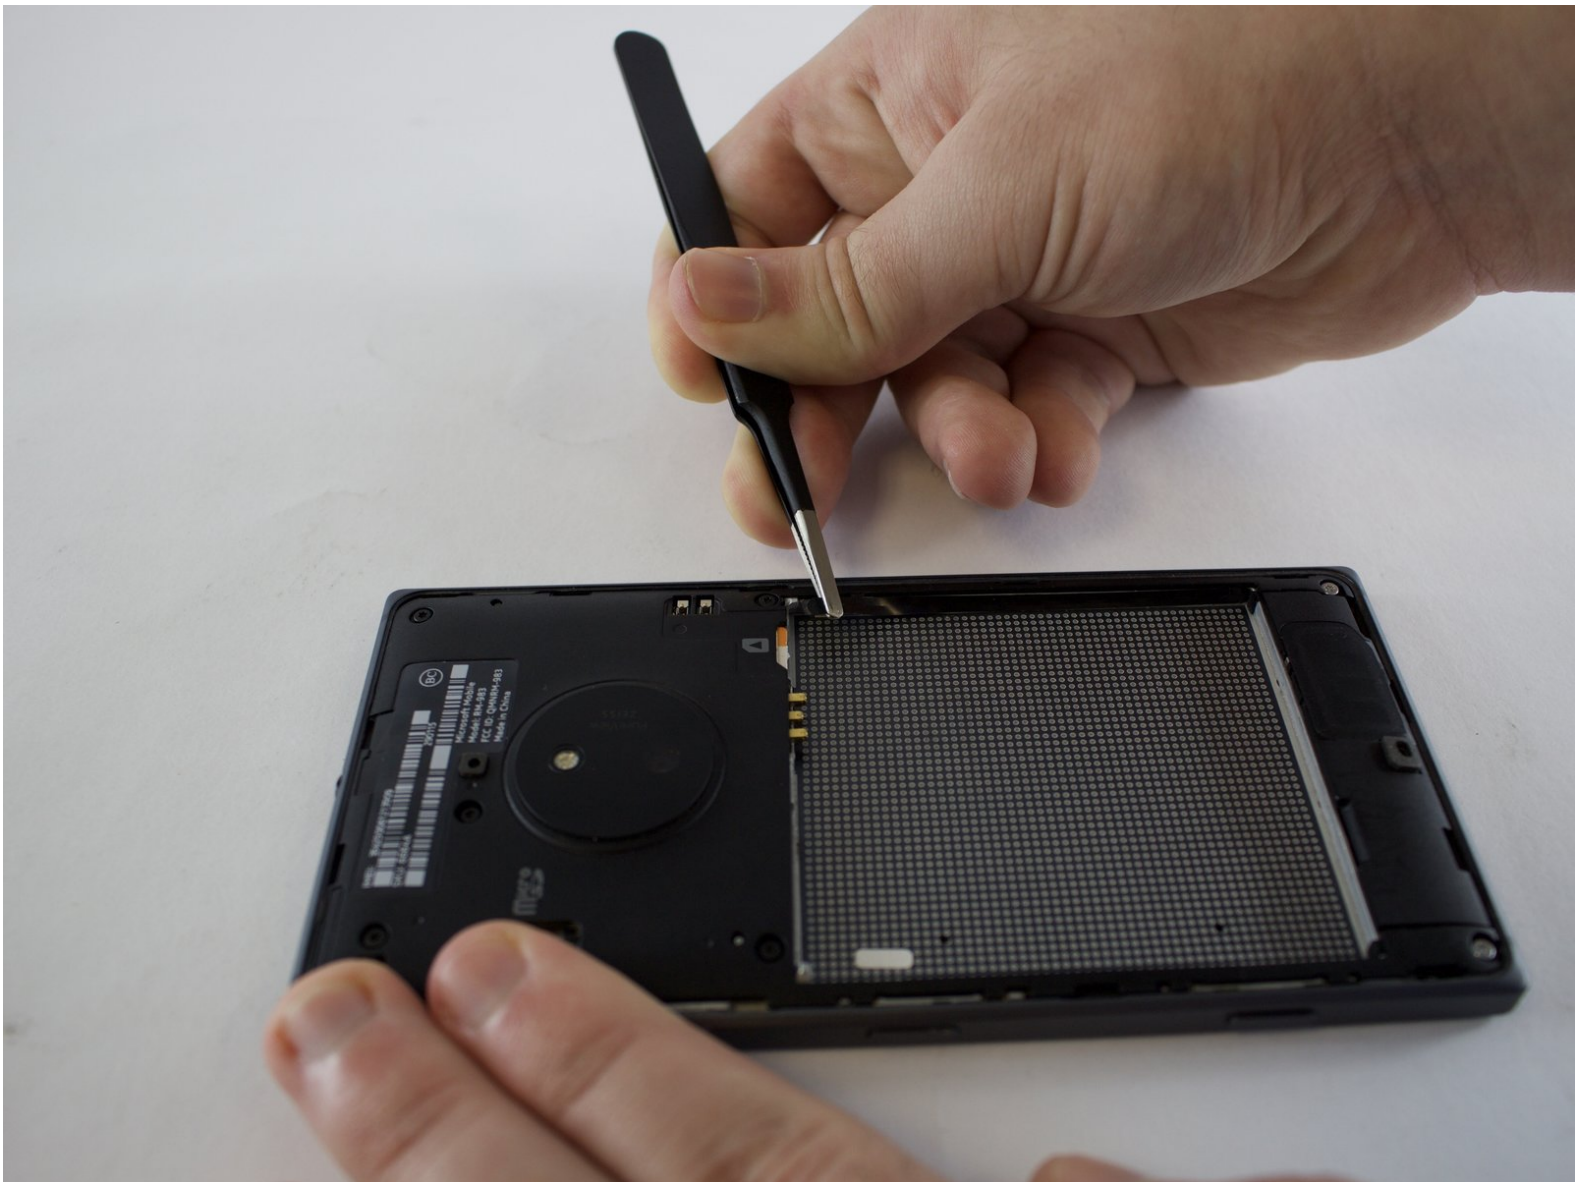

INTRODUCTION

If the speaker function on your Nokia Lumia 830 is not working properly and you are unable to play audio aloud, you may have a problem with your main speaker. If you need to replace it, this guide will walk you through it.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery





- Place the phone with the screen facing down.
- Remove the back cover by placing your fingernail or plastic opening tool under the slotted indent at the bottom of the phone.

Step 2

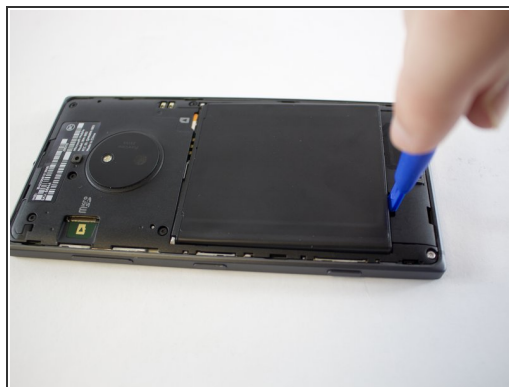



- Carefully remove the battery by placing the plastic opening tool underneath the indent at the bottom of the battery, and pry it up.
- ⓘ There may be adhesive underneath the battery to keep it in place, this may make it a bit difficult to remove the battery.

Step 3 — Main Speaker

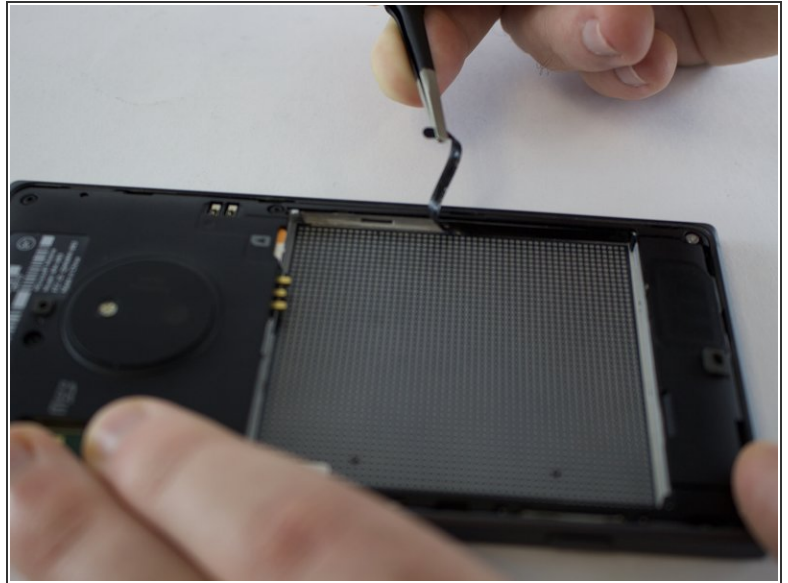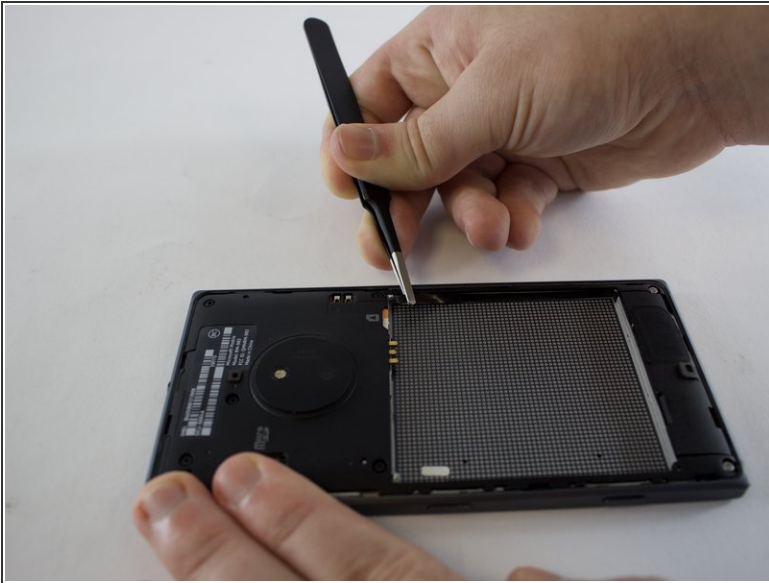

- Remove the black strips on both sides of the battery compartment.


Step 4

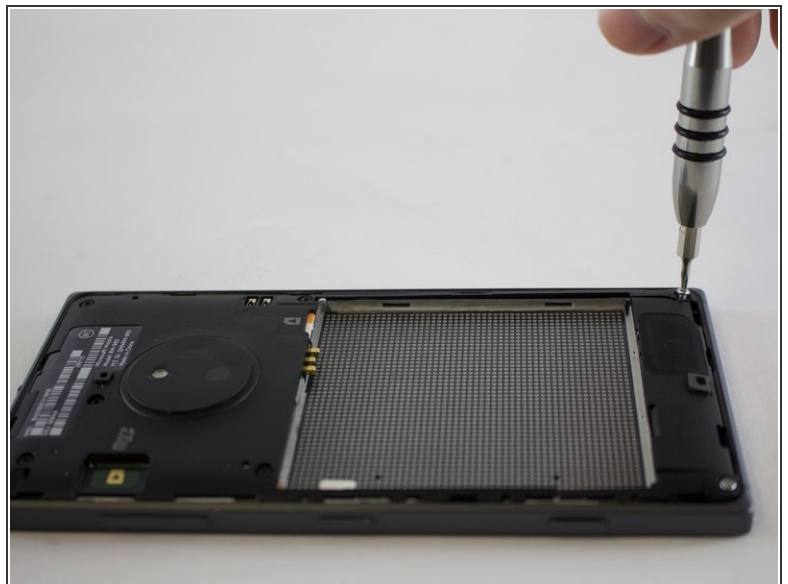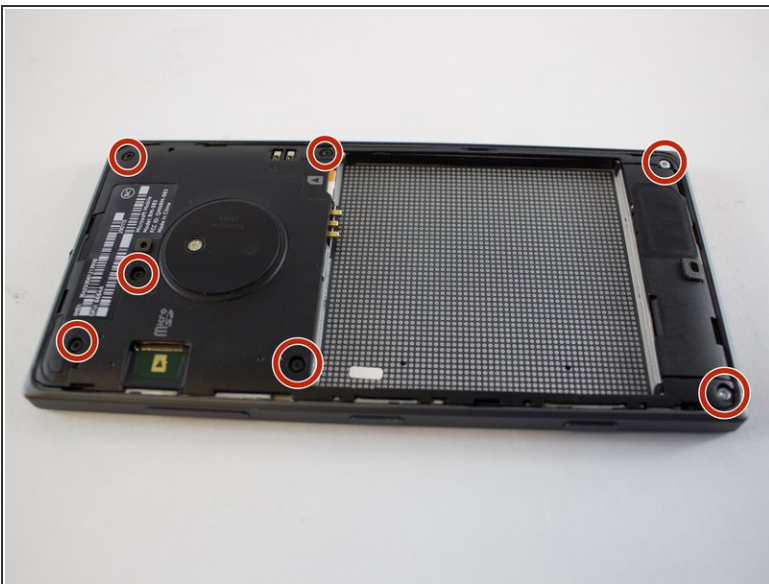

- Remove the two 3.9mm silver screws from the bottom corner of the phone. Then remove the five 2.5mm black screws from top to bottom of the phone.


 All of the screws take a t5 star screwdriver.

Step 5

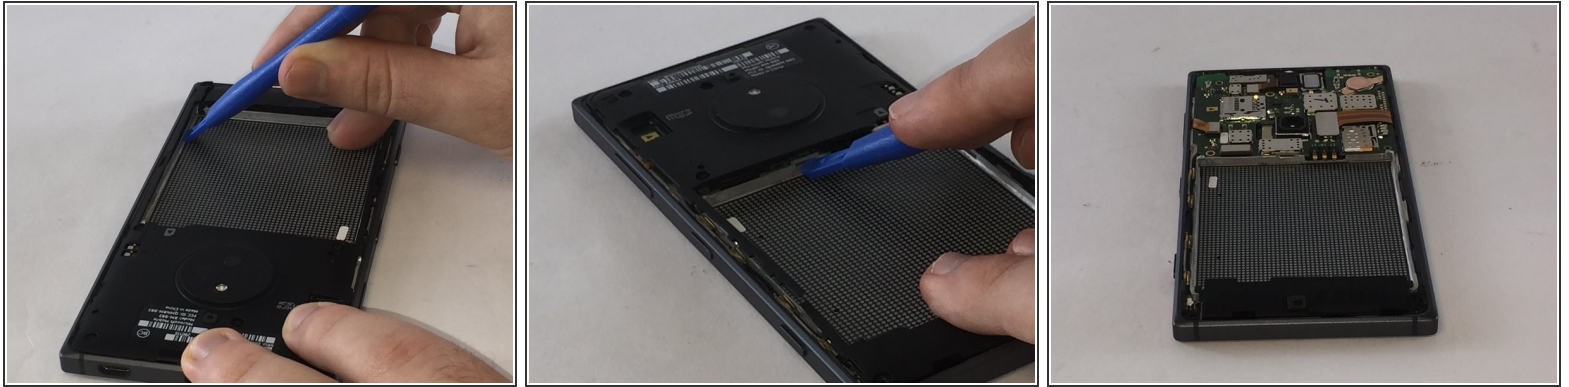

- Use the plastic opening tool to push into the slots holding the backing in place.
- All five slots are along the inner wall of the battery compartment. Push the slots on the sides first before pushing the slot on the top.
- Remove the backing from the frame, making sure to lift the bottom portion away from the phone, to allow the top to slide out of place.

Step 6

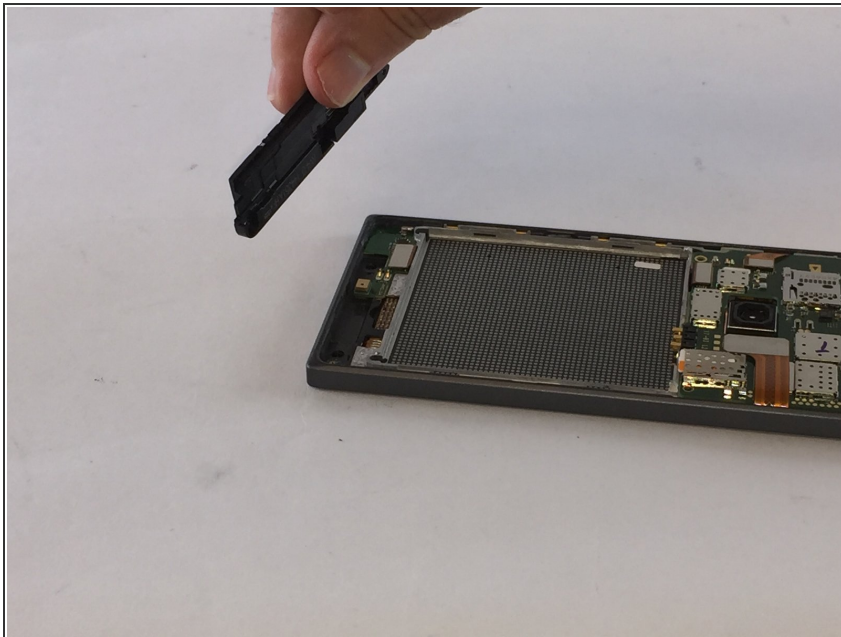

- Lift the speaker out of the phone. You may need to wiggle the speaker loose.

To reassemble your device, follow these instructions in reverse order.

