



Ricoh Shotmaster 130Z Film Release Spring Replacement

Ricoh Shotmaster 130Z Film Release Spring Replacement.

Written By: anna carolina von einem



INTRODUCTION

Ricoh Shotmaster 130Z Film Release Spring Replacement.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Film Release Spring



- Push the switch that says "open" on the side of the camera.

Step 2



- Once the compartment is open and unscrew the two 0.5mm Phillips screws that hold the spring in place. Replace the spring with a new one.

To reassemble your device, follow these instructions in reverse order.

