



Casio Digital Watch Teardown

A complete step by step guide to teardown a Casio Digital Watch.

Written By: Cooper



 **TOOLS:**


- 1.5 mm Phillips Screwdriver (1)
-

Step 1 — Casio Digital Watch



- This is a teardown of a Casio Digital Watch down to the internal circuitry.
- You will need a small Phillips screwdriver for this teardown.

Step 2 — Remove the Case

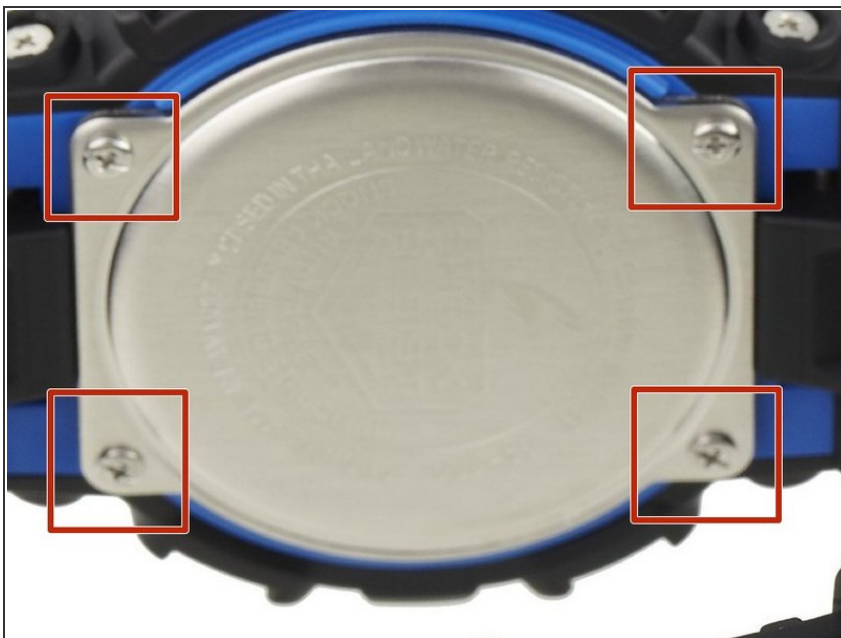

- Carefully remove the four screws on the backside of the watch.
- You will need an extremely small screwdriver. A screwdriver to repair glasses would work.

Step 3 — Gently Push out the Screen



- Press your fingers on the screen and remove the watch from its case.
- Be sure to save the three buttons that control the watch

Step 4 — Remove the Battery Holder



- Remove the Battery Holder surrounding the circuitry of the watch by carefully pulling off each of the four clips.

Step 5 — Remove the Battery




- Remove the battery by pulling from the sides to unstick the adhesive.

Step 6 — Detach the LCD



- Remove the four plastic pins connecting the LCD and remove the LCD holder

Step 7 — Teardown Complete

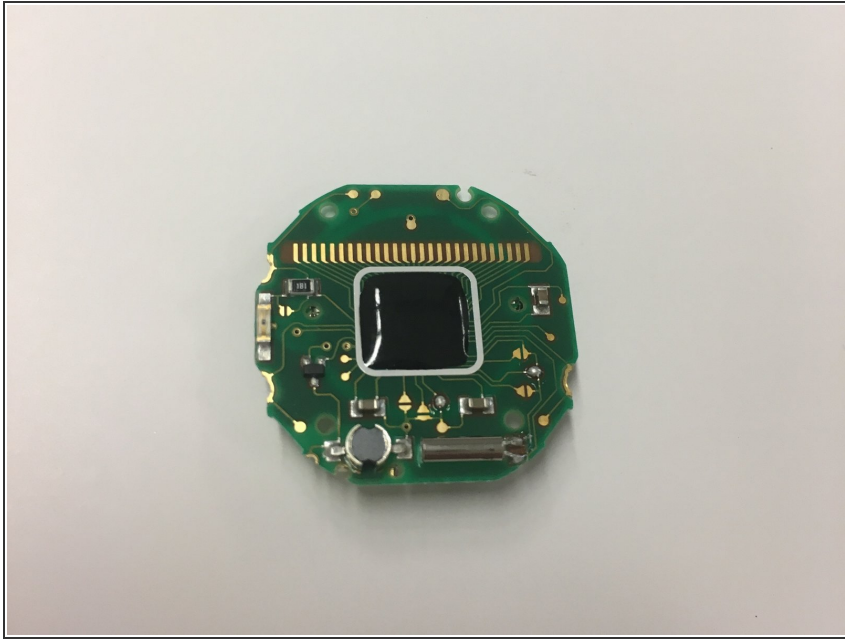

- This reveals the internal circuitry of the watch, and the teardown is complete.