



# Canon PowerShot SD1000 Battery Replacement

This guide details the removal of the rechargeable Canon battery. The removal is quick and does not require any use of tools.

Written By: Nick Tompkins



## Step 1 — Battery



- Turn the camera over so the bottom faces you.
- Slide the battery cover open.

## Step 2



- The battery cover should push out.
- Prop open the battery cover.

### Step 3



- Let the battery cover open fully and rest as shown.

### Step 4



- Flip the plastic lever holding the battery as shown.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.