



# Seagate Backup Plus Hub Disassembly

Here is my unsuccessful attempt at disassembling a Seagate Backup Plus Hub, in the hopes that you might be more successful.

Written By: Alan Nishioka



 **TOOLS:**

- [Phillips #1 Screwdriver \(1\)](#)
  - [Metal Spudger \(1\)](#)
  - [iFixit Opening Picks set of 6 \(1\)](#)
-

## Step 1 — Needed a Hard Drive



- I needed a hard drive and there are no cheap computer stores in the area, so I bought a Seagate Backup Plus Hub at Costco to remove the drive.
- You can see where I broke the case trying to remove it.

## Step 2 — Plastic Case Parts



- The plastic case is composed of three parts held together with clips.
- You are supposed to take off the flat top first, and then the sides.
- Unfortunately, I didn't know what it looked like inside, and I still don't know how to open the clips without breaking them.




### Step 3 — Case Details



- Here are some close-ups. You can see where I broke most of the plastic clips.

### Step 4 — Drive Details

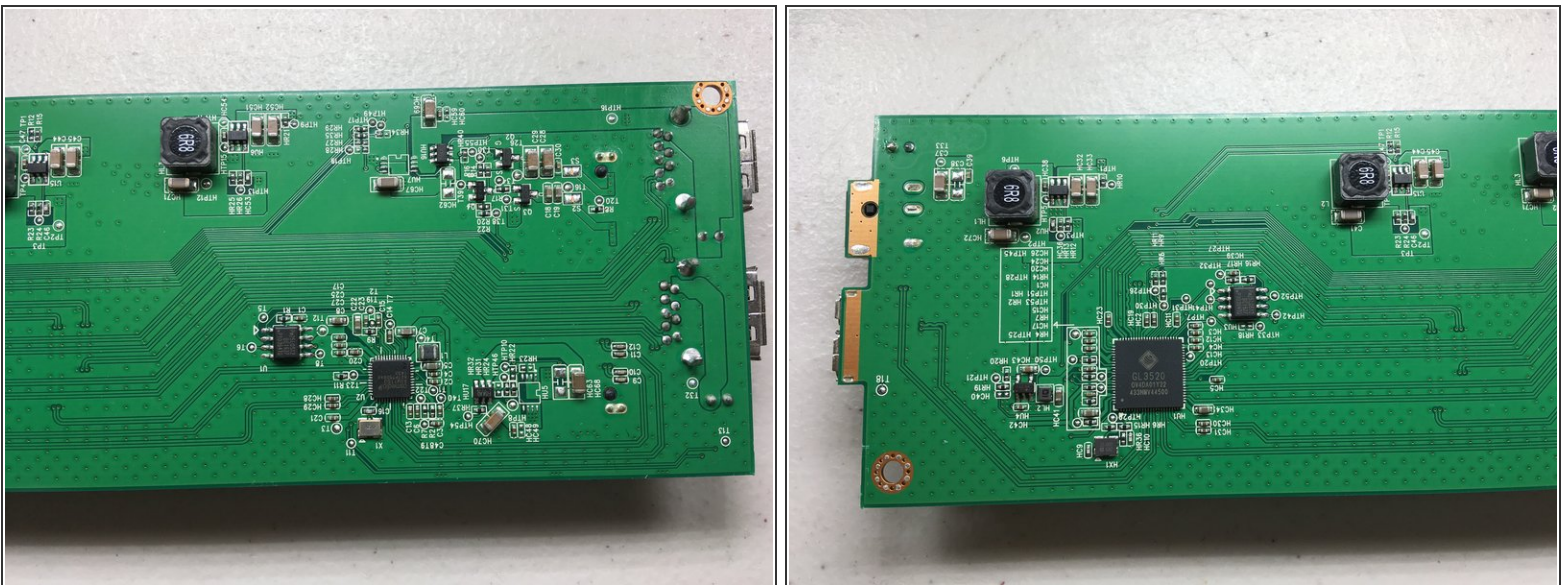

- Hard drive is a Seagate ST5000DM000-1FK178
- The drive is optimized for storage so it is **LARGE** and **SLOW**.
- Some people are removing it from an enclosure and selling on Ebay or Amazon. You get a big drive, but not a very good one.
- I'm going to have to buy another drive.

I couldn't put it back together again. And this turned out to be a BAD IDEA since the drive is very SLOW.