



1995-2002 Toyota 4Runner Engine Air Filter Replacement

A video tutorial on how to change the engine air filter on a 1995-2002 Toyota 4Runner.

Written By: eCuration



INTRODUCTION

The engine air filter should be replaced once every two years.

Follow this video tutorial by YouTuber [Toyota Maintenance](#) to complete the replacement yourself.



PARTS:

- [Air Filter Engine Toyota 4Runner 1996-2002](#) (1)
-

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-26 05:51:23 AM.