



# Alienware 17 R3 RAM Replacement

Replace the RAM in Alienware 17 R3.

Written By: Jonathon Tschurwald



---

## INTRODUCTION

This guide will show you how to replace the RAM for your Alienware 17 R3 laptop. Ensure you have all the necessary tools before starting.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Anti-Static Wrist Strap](#) (1)
-

## Step 1 — RAM




- Unscrew and remove the two 4mm Phillips #1 screws from the cover.

## Step 2



- Pull up to slide the cover off.

### Step 3

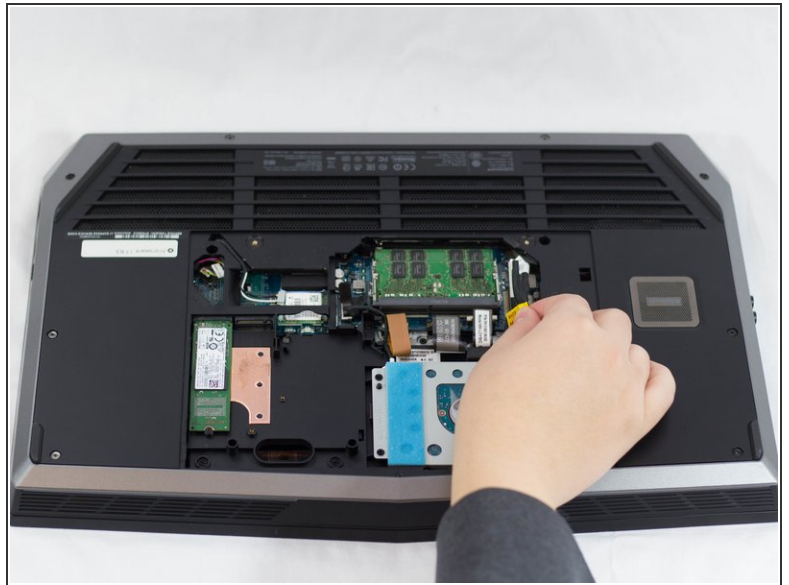

- Unplug the black wire with the yellow tag to disconnect the battery from the RAM stick.

### Step 4



- Release the tabs on each side of the chip by simultaneously pushing each tab away from the RAM.
- After the RAM chip has popped up, pull it straight out of its socket.
- ⓘ Repeat this process if a second RAM chip is installed.

To reassemble your device, follow these instructions in reverse order.