



Harman Kardon Onyx Studio 2 Front Panel Replacement

This guide shows how to remove the front panel of the Harman Kardon Onyx Studio 2 speaker to access the inside components or replace the entire front panel.

Written By: Alexandra Achtenberg



INTRODUCTION

If you need to access the insides of your speaker, you first have to take apart the device. This guide walks you through how to take apart the front panel.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T10 Torx Screwdriver](#) (1)
-

Step 1 — Front Panel



- Using a plastic opening tool, pry off the front grill by wedging it in the notch on the front of the device.

Step 2





- Remove the five 14.4 mm T10 Torx screws.

Step 3



- Gently pull the front apart from the back.

Step 4

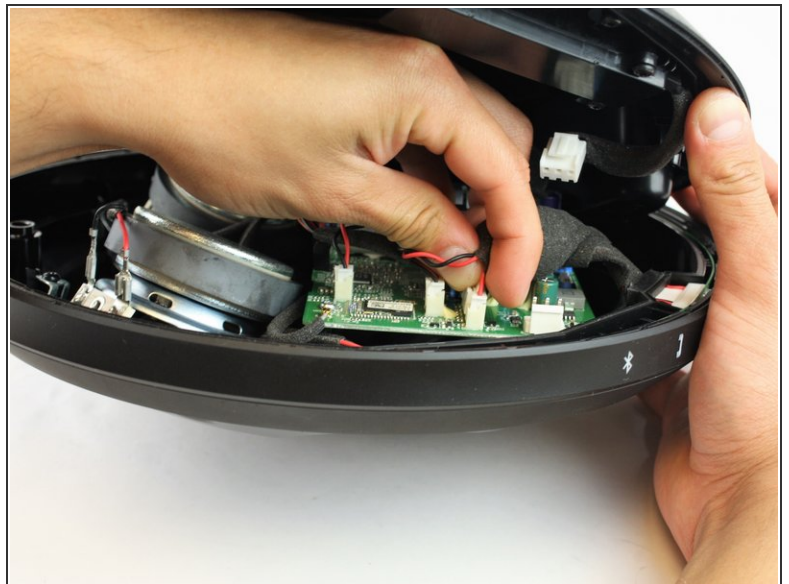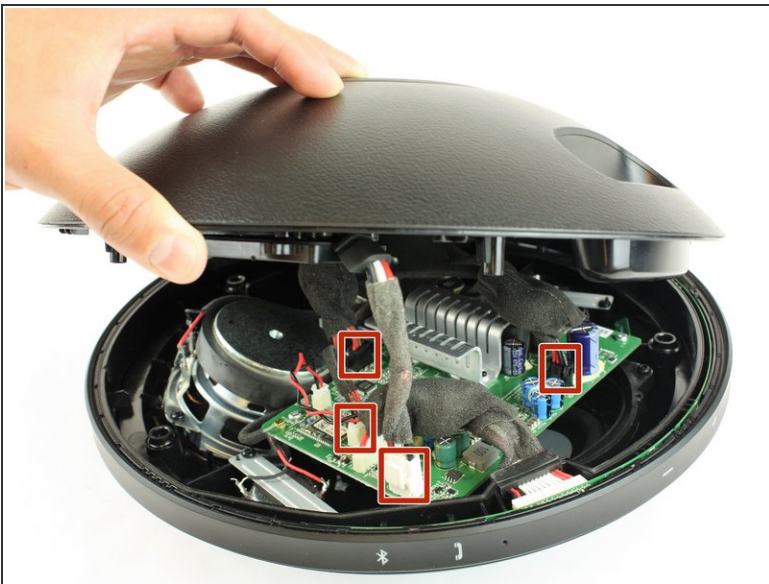

- Remove the four wires connecting the front and back panels.
- Pinch the connector tab and pull gently upwards.
- Repeat for the other three connectors.

To reassemble, follow these steps in reverse order.