 




Casio WK-220 Speaker Cover Replacement

Replace speaker cover

Written By: Alexa

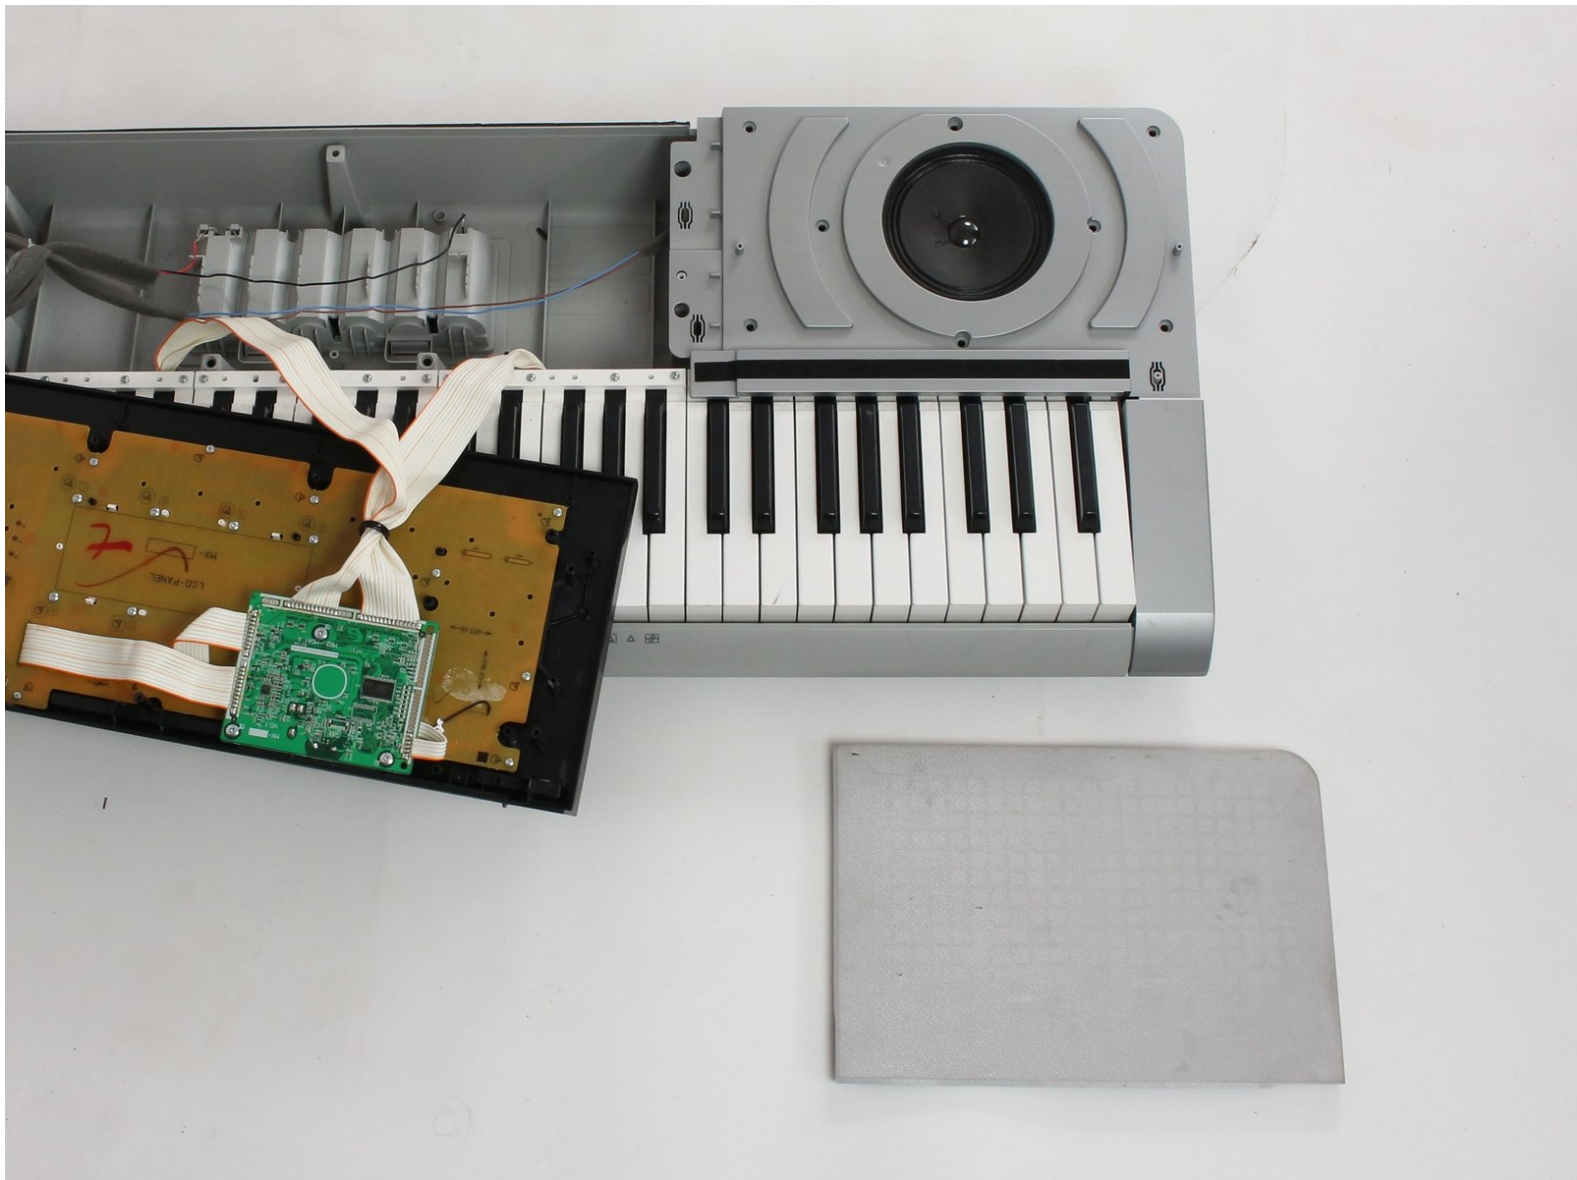

INTRODUCTION

This guide walks you through the steps of replacing a the speaker cover on this keyboard.



TOOLS:

 
- [Phillips #2 Screwdriver](#) (1)



PARTS:

- [Speaker Net \(L\)](#) (1)
- [Speaker Net \(R\)](#) (1)

Step 1 — Speaker Cover

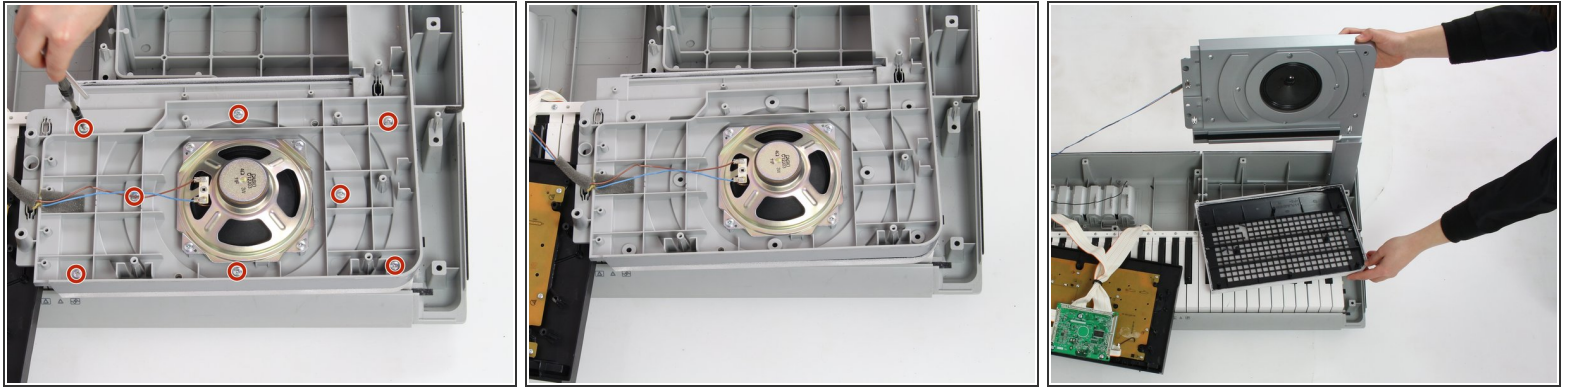

- Complete through step 3a of Speaker Replacement Guide, found [here](#).
- Remove eight 16 mm screws with Phillips #2 screwdriver
- Remove cover and reassemble with new one

To reassemble your device, follow these instructions in reverse order.