



Kindle Fire Frame Loosening

PREREQ


Written By: Phillip Takahashi



 **TOOLS:**

- Spudger (1)
 - Phillips #00 Screwdriver (1)
-

Step 1 — Frame Loosening

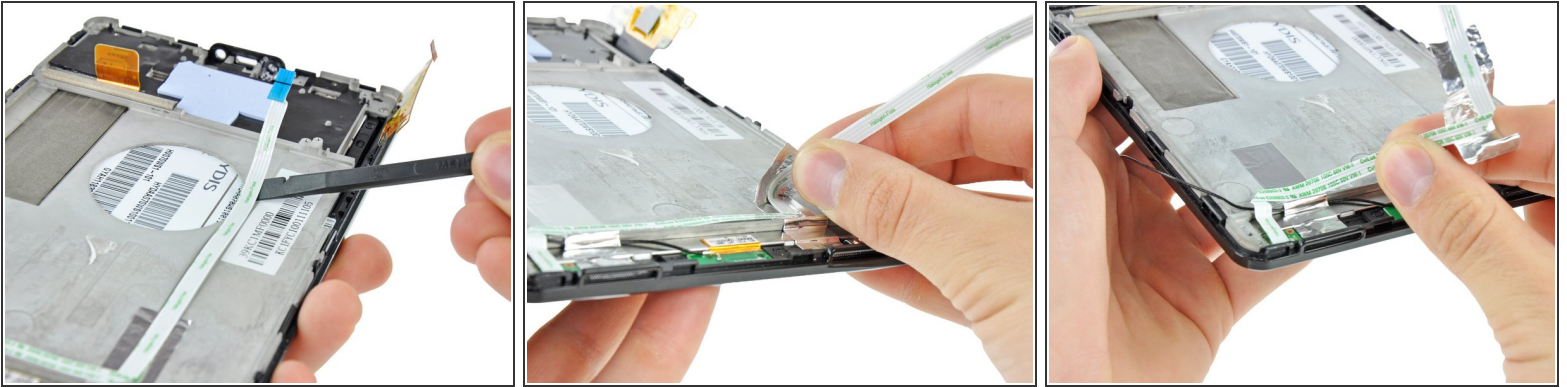

- Use the flat end of a spudger to peel the ambient light sensor cable off of the frame.
- ⓘ You will need to peel up the silver tape in the cable's lower right bend. The silver tape under the lower left bend of the cable does not need to come up with it.

Step 2



- Use the flat end of a spudger to peel up the silver tape securing the antenna cable.

Step 3



- Remove the five 3.6 mm Phillips #00 screws securing the frame and ambient light sensor.

To reassemble your device, follow these instructions in reverse order.