



LG VX8700 Front Bezel Replacement

The guide outlines the steps necessary to replace the Front Bezel in the LG VX8700. The Front Bezel is the front frame around the LCD screen.

Written By: Stanley Thomas



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the phone off.
- Remove the back cover by sliding the tab away from the phone using one finger.

Step 2



- Lift one side of the battery using a plastic opening tool or your fingers.
- Carefully remove the battery and set it aside.

Step 3




⚠ When installing the battery, make sure to align the metal pins with those of the phone.

Step 4 — Front Bezel



- Turn your phone around and open the flip phone.
- Locate the two grey rubber plugs on the LCD portion of the phone. These plugs cover up two screws.
- Remove the two grey screw-covers at the bottom of the screen

Step 5

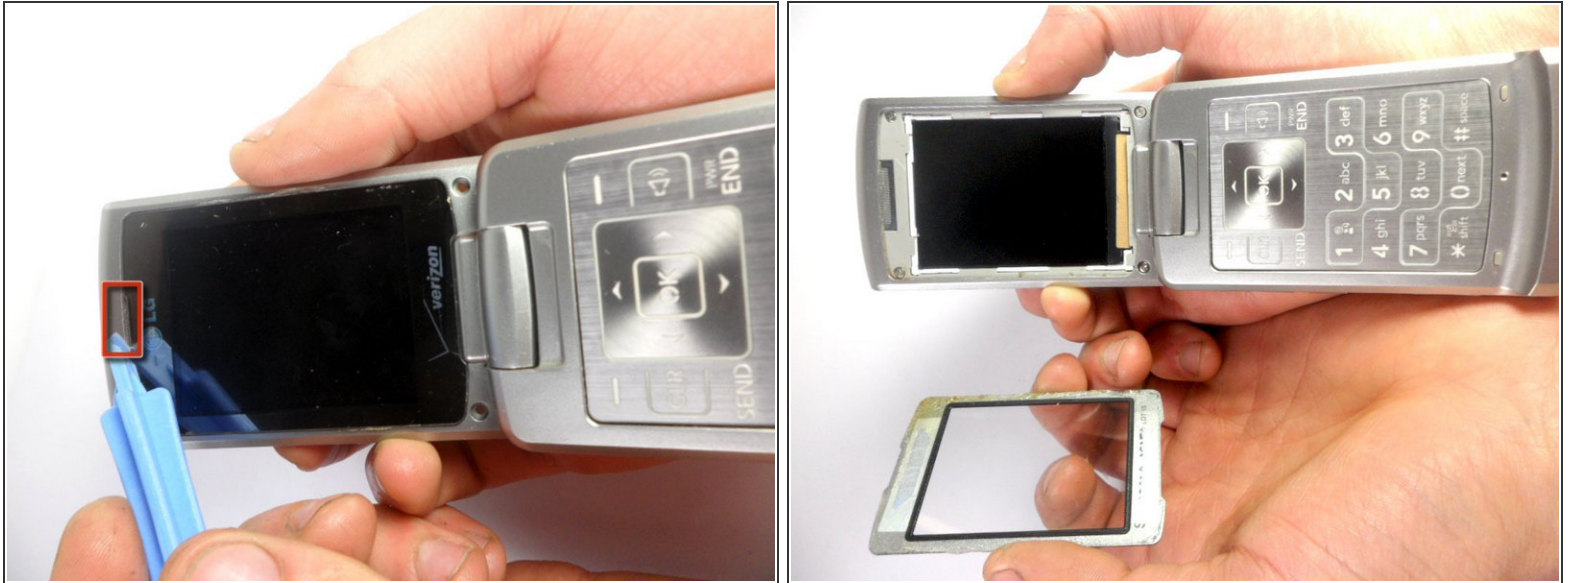


- Remove the screen by using the tab to eject the screen.
 - There is a gap between the case and the screen near the ear piece
 - Insert the plastic opening tool in the gap and pry the screen up.
- ⓘ The plastic screen cover is glued onto the phone, do not be alarmed if it may be difficult to pry it off.

Step 6



- Unscrew the four corner 3.21mm screws to separate the the top cover of the phone

Step 7

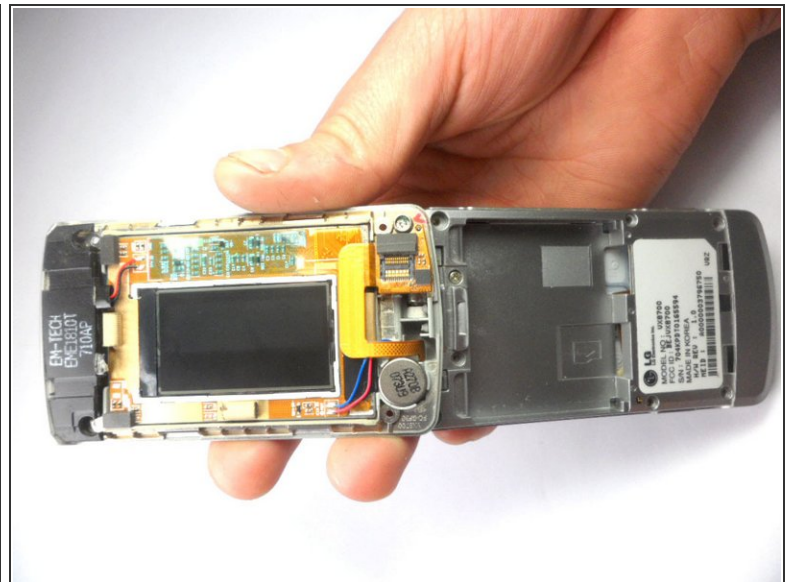

- Turn your phone around
- Remove the top cover of the phone by inserting the plastic opening tool into the groove.
- Carefully open the cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 06:51:48 PM.