



# Creative Nomad II SmartMedia Card Replacement

Use this guide to install the SmartMedia memory card in the CREATIVE NOMAD II Media Player.

Written By: George Gargov



## Step 1 — Battery



- Using your thumb, slide down and remove the battery cover.

## Step 2



- Using your index finger, remove the old AA battery.
- Install the new AA battery.

### Step 3 — Smart Media Card



- Slide down the eject button.
- Pull out the old SmartMedia Card.
- Insert the new SmartMedia Card.
  - The notched corner of the SmartMedia card should go in the top left corner.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-23 11:29:22 PM.