



Creative Nomad II Belt Clip Replacement

Use this guide to replace the belt clip on your Creative Nomad II Media Player.

Written By: Nathan



 **TOOLS:**

- [Flathead Screwdriver](#) (1)
-

Step 1 — Belt Clip



- Use a Flathead Screwdriver to remove the 6.5mm screw holding the belt clip to Nomad II.
- ⓘ When reassembling, do not overtighten the screw. That may create a crack in the plastic back cover and the new belt clip.

Step 2



- Remove the belt clip.
- Install new belt clip.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-22 03:41:14 AM.