




Acer Aspire One 532h-2806 RAM Replacement

This guide will give step-by-step instructions to remove the RAM card from the Acer Aspire One 532h-2806.

Written By: Julie Paula

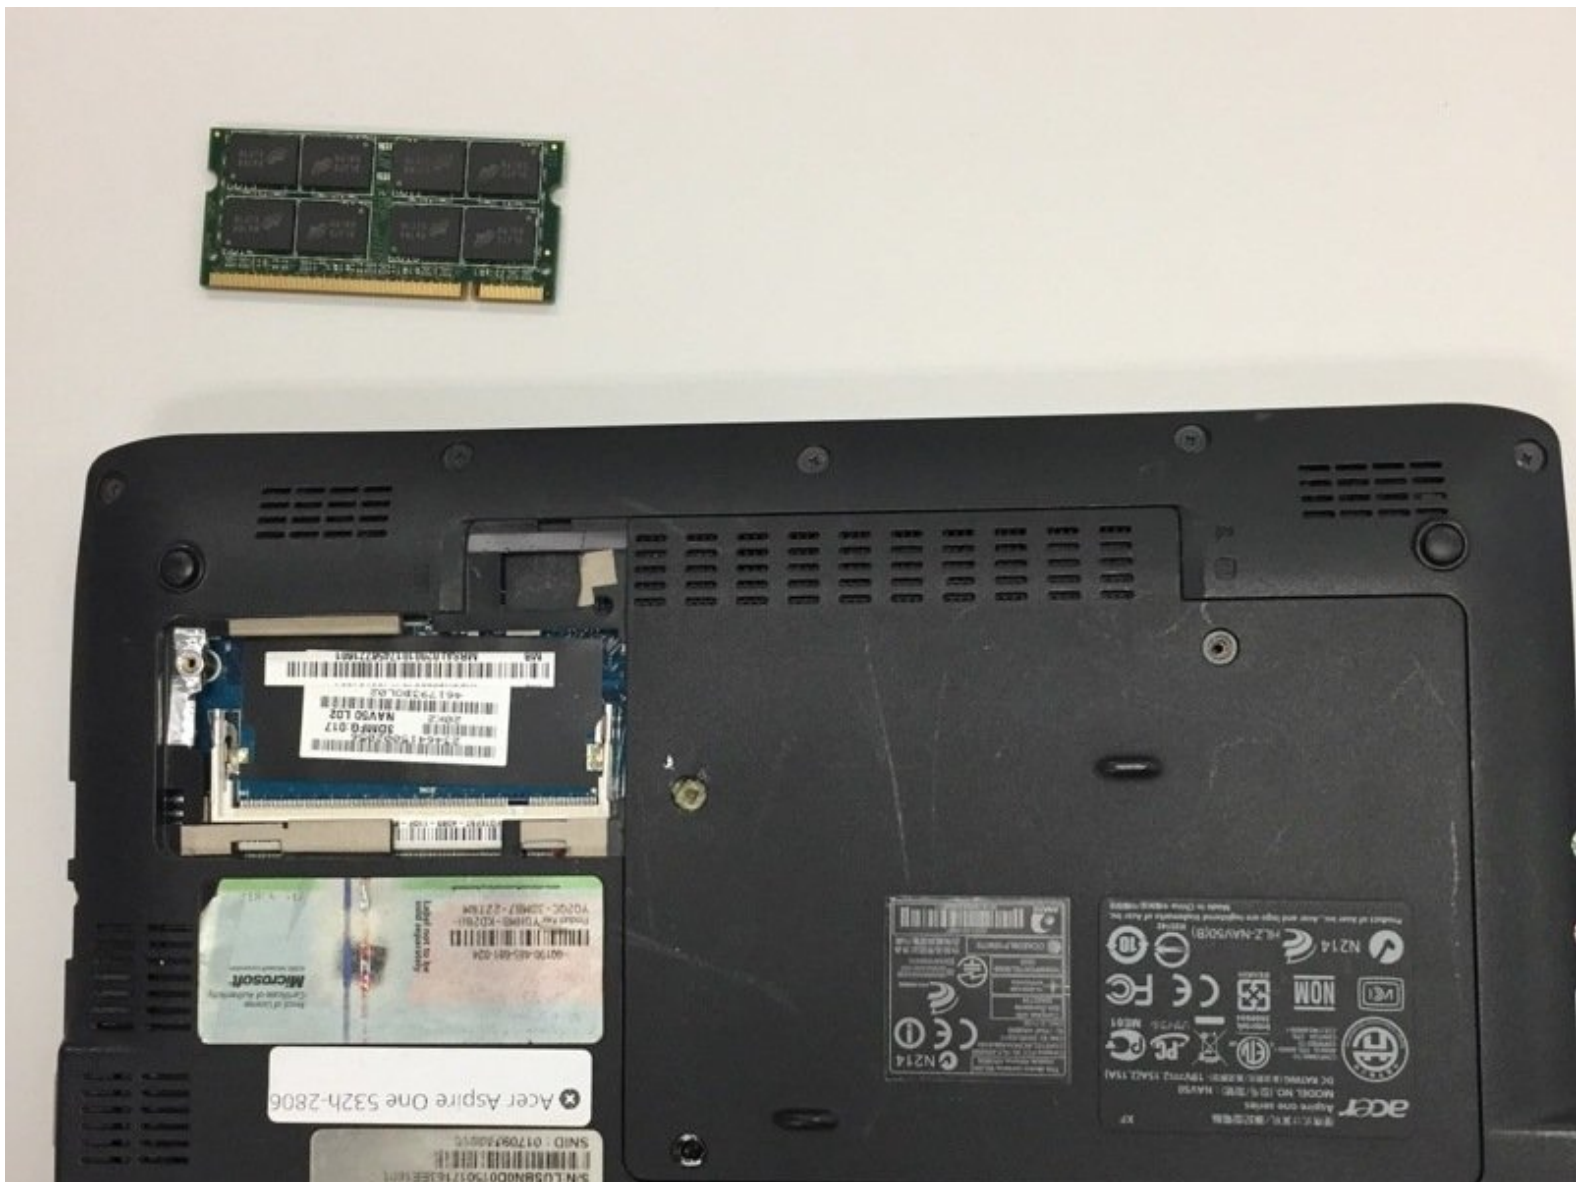


INTRODUCTION

This guide illustrates how to remove the RAM card from the Acer Aspire One 532h-2806, which is located on the bottom side of the netbook. This guide may be needed if your laptop is having internal hard drive issues.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-



Step 1 — RAM

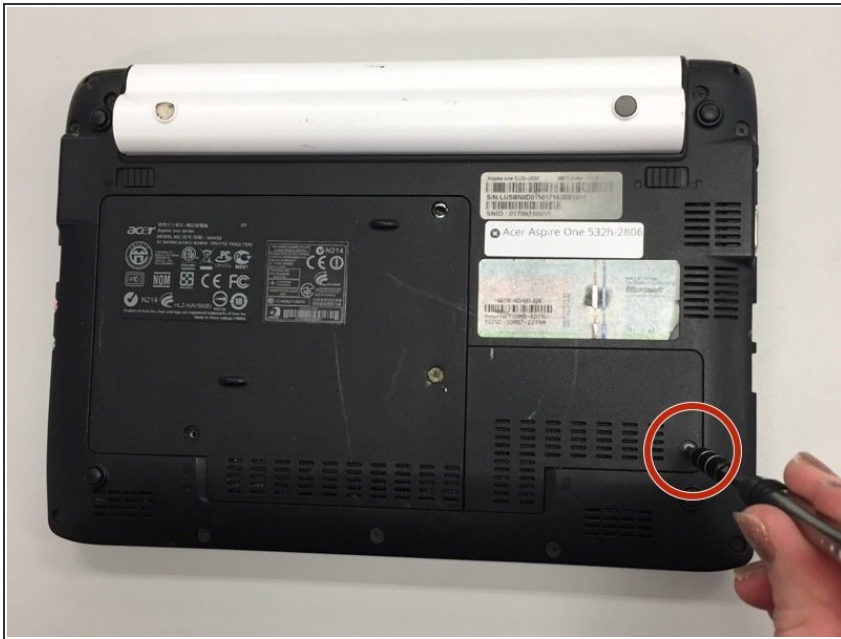

⚠ Turn off the computer and remove the battery before removing parts.

- Use a Phillips #0 screwdriver to remove the 6mm screw from the back of the computer.

Step 2

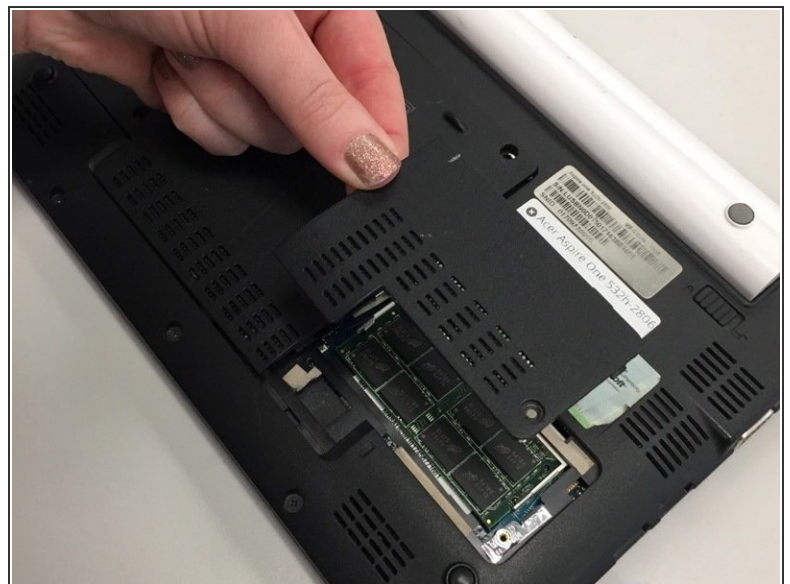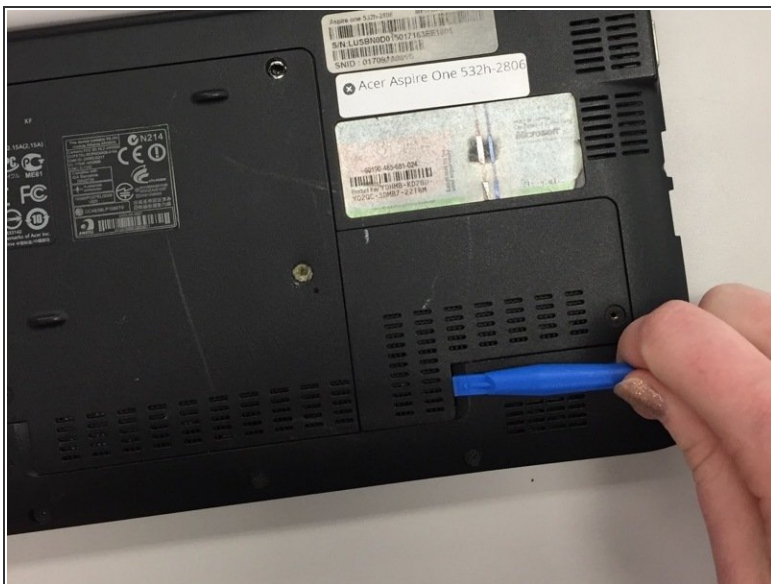


- Use an opening tool to remove the plastic plate covering the RAM, using the notch on the bottom right side.
- Remove the plate.

Step 3



- At the same time, press the latches on the sides of the RAM card to remove it.
- The RAM should pop up.

Step 4

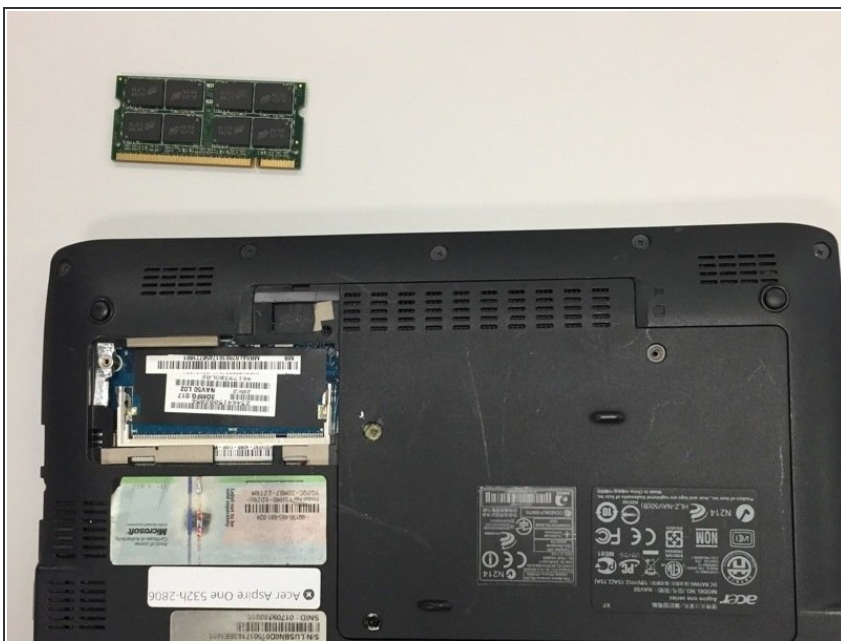

- Remove the RAM card.

To reassemble your device, follow these instructions in reverse order.